

Register your product and get support at

[www.philips.com/welcome](http://www.philips.com/welcome)

---

EN User Manual

32PFL6606H  
37PFL6606H  
40PFL6606H  
46PFL6606H  
55PFL6606H  
32PFL6606K  
37PFL6606K  
40PFL6606K  
46PFL6606K  
55PFL6606K  
32PFL6626H  
40PFL6626H  
32PFL6636H  
40PFL6636H  
32PFL6626K  
40PFL6626K  
32PFL6636K  
40PFL6636K

**PHILIPS**



## Contact information

### **België/ Belgique**

0800 80 190 Gratis / Gratuit

ЧАТ [www.philips.com/support](http://www.philips.com/support)

### **България**

00800 11 544 24

### **Česká republika**

800142840 Bezplatný hovor

### **Danmark**

3525 8759 Lokalt opkald

ЧАТ [www.philips.com/support](http://www.philips.com/support)

### **Deutschland**

0800 000 7520 gebührenfreier Anruf

ЧАТ [www.philips.com/support](http://www.philips.com/support)

### **Ελλάδα**

0 0800 3122 1280

Κλήση χωρίς χρέωση

### **España**

900 800 655 Teléfono local gratuito solamente para clientes en España

ЧАТ [www.philips.com/support](http://www.philips.com/support)

### **Estonia**

6008600 kohalik kõne tariifi

### **France**

0805 025 510 numéro sans frais

ЧАТ [www.philips.com/support](http://www.philips.com/support)

### **Hrvatska**

0800 222778 free

### **Ireland**

01 601 1777

### **Italia**

800 088774 Numero Verde

### **Қазақстан**

+7 727 250 66 17 local

### **Latvia**

52737691 local

### **Lithuania**

67228896 local

### **Luxemburg/Luxembourg**

40 6661 5644

Ortsgespräch/Appel local

### **Magyarország**

0680018189 Ingyenes hívás

### **Nederland**

0800 0230076 Gratis nummer

### **Norge**

22 70 81 11 Lokalsamtale

### **Österreich**

0800 180 016

### **Polska**

00800-311-13-18

Pozostałe produkty RTV oraz AGD

### **Portugal**

800780903 Chamada Grátis

### **Россия**

(495) 961-1111

8-800-200-0880

(бесплатный звонок по России)

### **România**

0800-894910 Apel gratuit

0318107125 Apel local

### **Србија**

+381 114 440 841 Lokalni poziv

### **Slovensko**

0800 004537 Bezplatný hovor

### **Slovenija**

00386 12 80 95 00 lokalni klic

### **Sverige**

08 5792 9100 Lokalsamtal

### **Suisse/Schweiz/Svizzera**

0800 002 050

Schweizer Festnetztarif/ Tarif réseau fixe France

### **Suomi**

09 2311 3415 paikallispuhelu

### **Türkiye**

0800 261 3302 Şehiriçi arama

### **United Kingdom**

General No: 0800 331 6015 free

General National Rate No:

0870 911 0036 National rate

### **Українська**

0-800-500-697

This information is correct at the time of print. For updated information, see [www.philips.com/support](http://www.philips.com/support).


# Contents

<b>1</b>	<b>Get started</b>	<b>4</b>	<b>6</b>	<b>Troubleshooting</b>	<b>50</b>
	TV tour	4		Contact Philips	50
	Important	7		General TV	50
	Environmental efforts	8		TV channel	50
	Position the TV	9		Picture	51
	Help and support	11		Sound	51
<b>2</b>	<b>Use your TV</b>	<b>12</b>		HDMI	52
	Controls	12		USB	52
	Watch TV	14		Network	52
	Watch a connected device	17	<b>7</b>	<b>Product specifications</b>	<b>53</b>
	Ambilight	18		Power and reception	53
	Browse PC through DLNA	19		Display and sound	53
	Browse Net TV	21		Display resolutions	53
	Rent online video	23		Multimedia	54
<b>3</b>	<b>Use more of your TV</b>	<b>25</b>		Connectivity	55
	View Teletext	25		Dimensions	55
	Set locks and timers	26		Help version	56
	View subtitles	27	<b>8</b>	<b>Index</b>	<b>57</b>
	View Scenea	27			
	Set universal access	28			
	Use EasyLink	29			
<b>4</b>	<b>Set up your TV</b>	<b>32</b>			
	Settings assistant	32			
	Picture and sound	32			
	Channels	33			
	Menu language	36			
	Other settings	36			
	Update software	36			
	Reinstall the TV	37			
<b>5</b>	<b>Connect your TV</b>	<b>38</b>			
	About cables	38			
	Connect devices	40			
	Connect more devices	46			
	Computers and the Internet	47			
	Common interface	49			


# 1 Get started

## TV tour

### Remote control

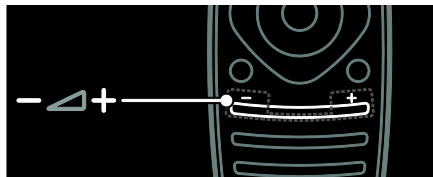

To adjust the volume.

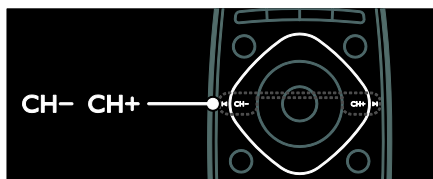


To switch TV channels.



To open or close the **Home menu**.

In the Home menu, access connected devices, picture and sound settings, and other useful features.

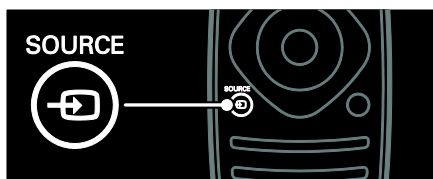

To open or close the **Source menu**.

In the Source menu, access connected devices.



To open or close the **Find menu**.

In the Find menu, access the channel list.



To open or close the **Adjust menu**.

In the Adjust menu, access a range of frequently used settings.



To open or close the **Text menu**.

In the Text menu, access teletext for news and information.




To open or close the **Options menu**.

Options menus offer convenient settings for TV channels or programmes.




To return to the previous menu page or to exit from a TV function.

Press and hold to return to watching TV.

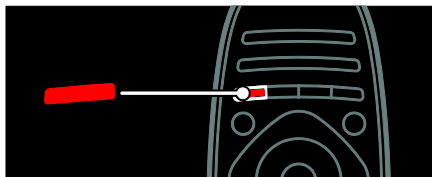

To select a red menu option, access digital Interactive TV services\*, or watch TV demonstration clips.

\*Available on certain models only.

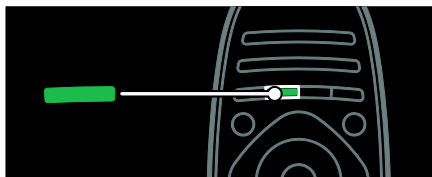

To select a green menu option or to access energy efficient settings.




To select a yellow menu option or to access the electronic user manual.

Read more about the remote control in **Use your TV > Controls > Remote control** (Page 12). Alternatively, look at the index in **Search for...**

Press **▲** to select the next TV tour.

## Connect devices

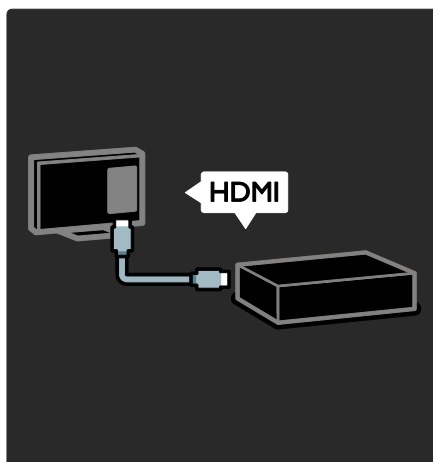

For the best picture and sound quality, connect a DVD, Blu-ray disc player, or game console through HDMI (TM).

To watch a non EasyLink compliant device, add it to the Home menu.

1. Press **Home** > **[Add your devices]**.
2. Follow the onscreen instructions.


Note: If you are prompted to select the TV connection, select the connector that this device uses. See **Connect your TV > Connect devices** (Page 40) for information on connection.

If an EasyLink or HDMI-Consumer Electronic Control (HDMI-CEC) compliant device is connected to the TV, it is automatically added to the Home menu when both devices are switched on.

To watch a connected device

1. Press **Home**.
2. Select the newly added device icon.

You can learn more on device connections in **Connect your TV > Connect devices**.

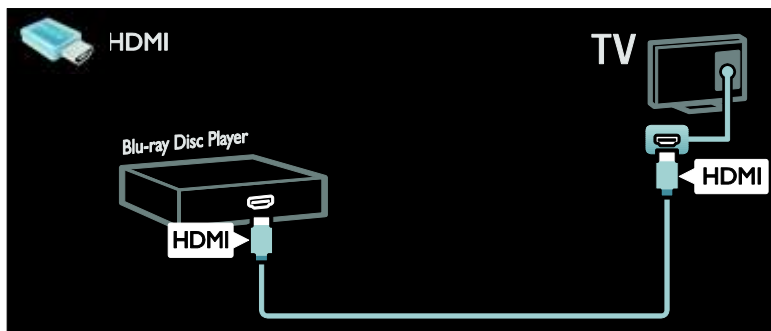

## High Definition TV

For high-definition (HD) picture quality, watch HD programmes.

On standard-definition (SD) programmes, the picture quality is standard.

You can watch HD video content in these ways and more:

- a Blu-ray disc player, connected with an HDMI cable, playing a Blu-ray disc
- an upscaling DVD player, connected with an HDMI cable, playing a DVD disc
- an over-the-air HD broadcaster (DVB-T MPEG4)
- a digital HD receiver, connected with an HDMI cable, playing HD content from a cable or satellite operator
- an HD channel on your DVB-C network
- an HD game console (for example, X-Box 360 or PlayStation 3), connected with an HDMI cable, playing an HD game

## HD video clip

To experience the stunning sharpness and picture quality of HD TV, watch the HD video clip from the Home menu.

Press **Home** > **[Setup]** > **[Watch demos]**.

**Watch Demo** is on the second page of the setup menu.

For more information about the availability of HD channels in your country, contact your Philips dealer or visit

[www.philips.com/support](http://www.philips.com/support).


## Ambilight

(Available on certain models only.)

Ambilight gives a more relaxed viewing experience. It automatically adjusts the colour and brightness of the light to match the TV picture.

Read more in **Use your TV > Ambilight** (Page 18).

## Network

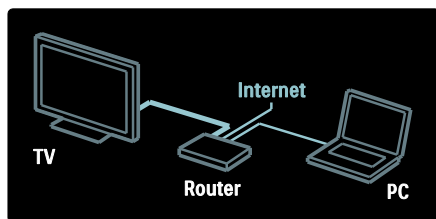

Connect your TV to your home network to play music, photos, and videos from a computer or other media server on the same network.

Read more in **Connect your TV > Computers and the Internet** (Page 47).

## Net TV

If your home network is connected to the Internet, you can connect your TV to **Net TV**. Net TV offers movies, pictures, music and much more.

Read more in **Use your TV > Browse Net TV** (Page 21).

# Important

## Safety

Read and understand all instructions before you use your TV. If damage is caused by failure to follow instructions, the warranty does not apply.

### Risk of electric shock or fire!

- Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilt on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips Consumer Care to have the TV checked before use.
- Never insert objects into the ventilation slots or other openings on the TV.
- When the TV is swivelled, ensure that no strain is exerted on the power cord. Strain on the power cord can loosen connections and cause arcing.
- Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.



### Risk of short circuit or fire!

- Never expose the remote control or batteries to rain, water or excessive heat.
- Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire.

### Risk of injury or damage to the TV!

- Two people are required to lift and carry a TV that weighs more than 25kg or 55lbs.
- When stand mounting the TV, use only the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the combined weight of the TV and the stand.
- When wall mounting the TV, use only a wall mount that can support the weight of the TV. Secure the wall mount to a wall that can support the combined weight of the TV and wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that result in accident, injury or damage.
- Before you connect the TV to the power outlet, ensure that the power voltage matches the value printed on the back of the TV. Never connect the TV to the power outlet if the voltage is different.

### Risk of injury to children!

Follow these precautions to prevent the TV from toppling over and causing injury to children:

- Never place the TV on a surface covered by a cloth or other material that can be pulled away.
- Ensure that no part of the TV hangs over the edge of the surface.
- Never place the TV on tall furniture, such as a bookcase, without anchoring both the furniture and TV to the wall or a suitable support.
- Educate children about the dangers of climbing on furniture to reach the TV.

### Risk of swallowing batteries!

- The product/remote control may contain a coin-type battery, which can be swallowed. Keep the battery out of reach of children at all times!

### Risk of overheating!

- Never install the TV in a confined space. Always leave a space of at least 4 inches or 10 cm around the TV for ventilation. Ensure that curtains or other objects never cover the ventilation slots on the TV.

### Risk of injury, fire or power cord damage!

- Never place the TV or any objects on the power cord.
- To easily disconnect the TV power cord from the power outlet, ensure that you have full access to the power cord at all times.
- When you disconnect the power cord, always pull the plug, never the cable.
- Disconnect the TV from the socket and aerial before lightning storms. During lightning storms, never touch any part of the TV, power cord or aerial cable.

### Risk of hearing damage!

- Avoid using earphones or headphones at high volumes or for prolonged periods of time.

### Low temperatures

- If the TV is transported in temperatures below 5°C or 41°F, unpack the TV and wait until the TV temperature matches room temperature before connecting the TV to the power outlet.

### Screen care

- Risk of damage to the TV screen! Never touch, push, rub or strike the screen with any object.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the TV.
- To avoid deformations and colour fading, wipe off water drops as soon as possible.

- Avoid stationary images as much as possible. Stationary images are images that remain onscreen for extended periods of time. Stationary images include onscreen menus, black bars, time displays, etc. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.

---

## Environmental efforts

### Energy efficiency

Philips continuously focuses on lowering the environmental impact of our innovative consumer products. We aim our efforts towards environmental improvements during manufacturing, reduction of harmful substances, energy-efficient use, end-of-life instructions and product recycling.


#### To access energy efficient settings:

While you watch TV, press the **green** button on the remote control.

These energy-efficient settings include:


- **Energy saving picture settings:** You can apply a combination of energy saving picture settings. While you watch TV, press the **green** button and select **[Energy saving]**.
- **Power switch:** You can completely cut off power to the TV with the power switch. It is located at the base of the set.
- **Mute screen:** If you only want to listen to audio from the TV, you can turn off the TV display. Other functions continue to operate normally.
- **Light sensor:** The built-in ambient light sensor lowers the brightness of the TV screen when the surrounding light darkens.
- **Low standby power:** The advanced power circuitry brings down the power consumption of the TV to an extremely low level, without losing out on the constant standby functionality.



- **Power management:** The advanced power management of this TV ensures the most efficient use of its energy. To view how your personalised TV settings affect the TV's relative power consumption, press  and select **[Setup] > [Watch demos] > [Active Control]**.

## End of use

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

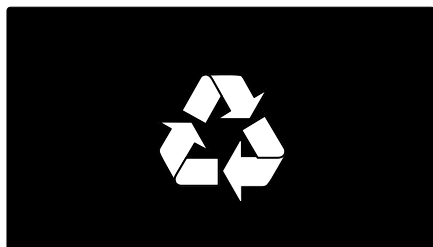


When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.



Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environment and human health.

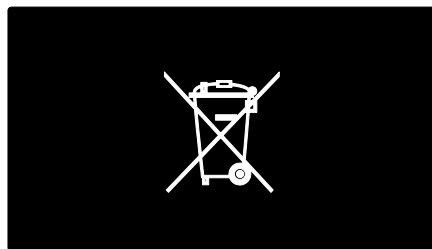

## Position the TV

### Placement

- Before you position the TV, read all safety precautions. See **Get Started > Important > Safety** (Page 7).
- Position the TV where light does not shine directly on the screen.
- The ideal distance from which to watch TV is three times its diagonal screen size. For example, if the diagonal screen size of the TV is 116cm / 46", the ideal viewing distance is ~3.5m / ~138" from the front of the screen.
- While seated, your eyes should be level with the centre of the screen.

### Stand mount or wall mount

To apply the best settings for your TV, select wall mount or stand mount.

1. In the **[Preferences]** menu, select **[TV placement]**.
2. Select **[On a TV stand]** or **[Wall mounted]**, then press **OK**.

## Wall mount

To mount the TV, purchase a Philips TV mount or a compatible TV mount. Check your TV screen size and match it against the list for the type of wall mount to purchase:

**81 cm / 32 inches :** 200mm x 200mm, M6

**94 cm / 37 inches:** 200mm x 200mm, M6

**102 cm / 40 inches:** 400mm x 400mm, M6

**117 cm / 46 inches:** 400mm x 400mm, M6

**140 cm / 55 inches:** 400mm x 400mm, M8


**Warning:** Follow all instructions provided with the TV mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper TV mounting that results in accident, injury or damage.

To prevent damage to cables and connectors, leave a gap of at least 5.5 cm / 2.2 inches from the back of the TV.

### For 32 inch to 46 inch TVs:

Before you wall mount the TV, find the correct length of screw.


To find the length of screw, add the thickness of your wall mount to the screw length, as shown in the graphic.

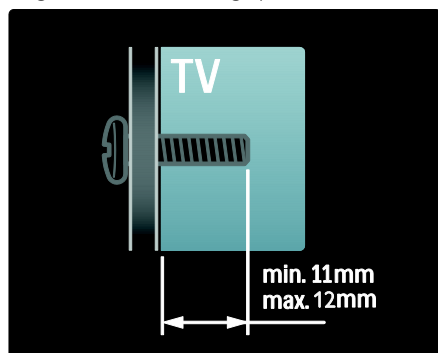

### For 55 inch TVs:

Before you wall mount the TV, find the correct length of screw.

To find the length of screw, add the thickness of your wall mount to the screw length, as shown in the graphic.

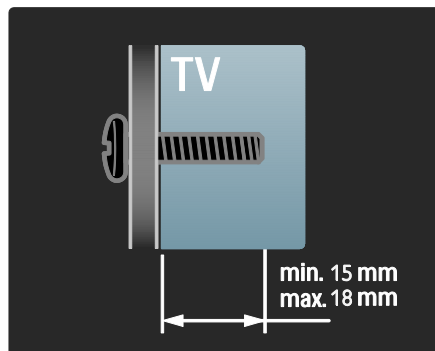


## Location

A range of TV settings are applied to suit the location of the TV.

### Shop or home mode

Set the TV location to **Home** mode to access all TV settings. In **Shop** mode, you can access only a few settings.

1. While you watch TV, press .
2. Select **[Setup] > [TV settings] > [Preferences]**.
3. Select **[Location] > [Home]** or **[Shop]**, then press **OK**.
4. Restart the TV.

### Lock the TV

Your TV is equipped with a Kensington security slot at the base of the TV. Purchase a Kensington anti-theft lock (not supplied) to secure the TV.



---

# Help and support

## Use Help

You can access onscreen **[Help]** from the Home menu by pressing the Yellow button.

You can also switch between the **[Help]** menu and the TV menu by pressing the Yellow button.

## Online support

If you can't find what you need in the onscreen **[Help]**, consult our online support at [www.philips.com/support](http://www.philips.com/support).

Follow the website instructions to select your language, then enter your product model number.

At our support website, you can also:

- find answers to frequently asked questions
- download a printable PDF version of this user manual to read
- email us a specific question
- chat online with one of our support personnel (available in certain countries only)

## Contact Philips


If you like, you can contact Philips Consumer Care in your country for support. You can find the contact number in the leaflet accompanying the TV.

Before you contact Philips, note down your TV model and serial number. You can find this information on the back of your TV or on its packaging.

## 2 Use your TV


### Controls

#### TV controls

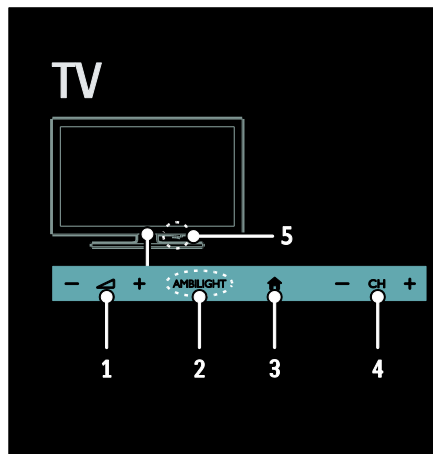


1. +/-: Increase or decrease volume.
2. **AMBILIGHT**: Switch Ambilight on or off. Ambilight is available on certain models only.
3. (**Home**): Access the Home menu. Press again to launch an activity in the Home menu.
4. **CH +/-**: Switch to the next or previous channel.
5. **Power**: Switch the TV on or off.

#### Indicators

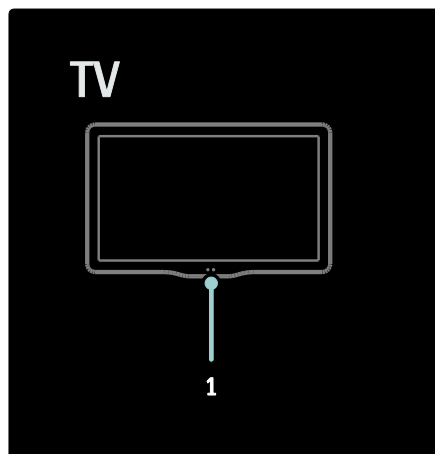


1. **Ambient sensor / remote control sensor**  
Ambient sensor is available on certain models only


#### Remote control

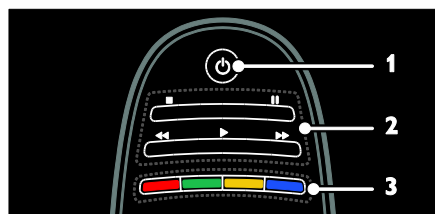


1. (**Standby**): Switch the TV on or to standby.
2. **Play buttons**: Control video or music play.
3. **Colour buttons**: Select tasks or options. Not supported in MHEG mode.

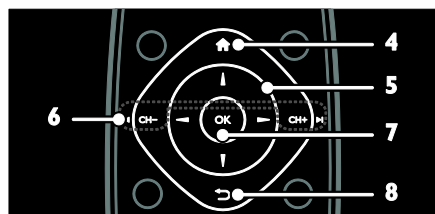

4. **🏠 (Home):** Access the Home menu.
5. **⏮⏪⏩⏭ (Navigation buttons):** Navigate through menus and select items.
6. **⏮ CH - / CH + ⏭ (Previous/Next):** Switch channels, navigate through menu pages, tracks, albums or folders.
7. **OK:** Confirm an entry or selection.
8. **↶ (Back):** Return to the previous menu page or exit from a TV function.

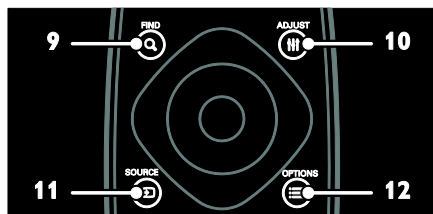

9. **🔍 FIND:** Access the menu to select TV channel list.
10. **≡ ADJUST:** Access the menu to adjust settings.
11. **📺 SOURCE:** Select connected devices.
12. **≡ OPTIONS:** Access options for the current activity or selection.

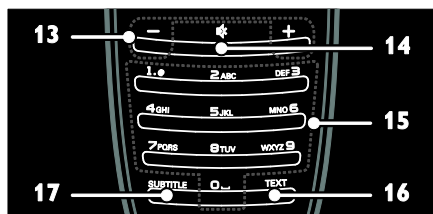

13. **+/- (Volume):** Adjust volume.
14. **🔇 (Mute):** Mute or restore audio.
15. **0-9 (Numeric buttons):** Select channels.
16. **TEXT:** Enable or disable teletext.
17. **SUBTITLE:** Enable or disable subtitles.

## Batteries

**Warning:** Risk of swallowing batteries!  
The product/remote control may contain a coin-type battery, which can be swallowed. Keep the battery out of reach of children at all times!

**Caution:** The battery contains perchlorate material, handle it with care. For information, see

[www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

If your remote control signal is weak, replace the batteries:

1. Open the battery cover.
2. Remove the old batteries from the battery compartment, and replace them with fresh batteries.

Make sure that the ends of the batteries line up correctly with the +/- markings in the battery compartment.


## Notes:

Dispose of batteries according to environmental directives. Read **Get started > Environmental efforts > End of use** (Page 9).


Remove batteries from the remote control if you will not use it for an extended period of time.

The type of battery varies according to RC model:


For remote control with AAA batteries (end to end):

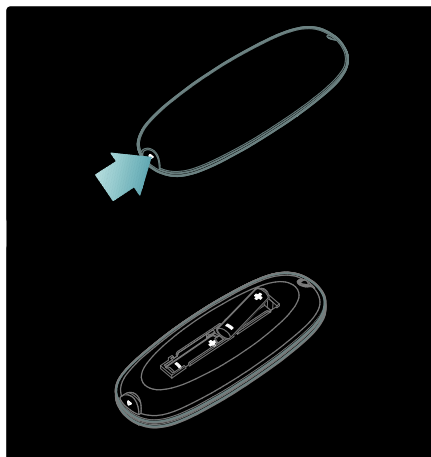

For remote control with AAA batteries (side by side):

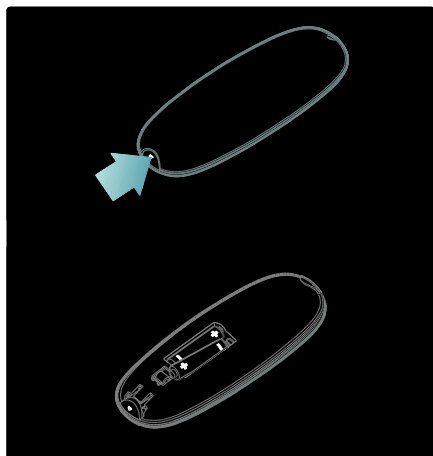

For remote control with coin cell batteries:

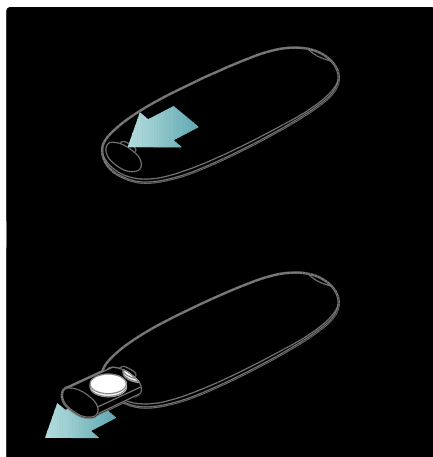


## EasyLink controls

**Note:** EasyLink controls are available when the connected device is HDMI-CEC compliant.

EasyLink allows you to control your TV and other HDMI-CEC devices with one remote control.


## Access EasyLink controls

1. While you view content from a connected HDMI-CEC device, press  **OPTIONS**.
2. Select **[Show device keys]**, then press **OK**.
3. Select the EasyLink control button, then press **OK**.


Read more on EasyLink in **Use more of your TV > Use EasyLink** (Page 29).

## Watch TV

### Switch TV on or off

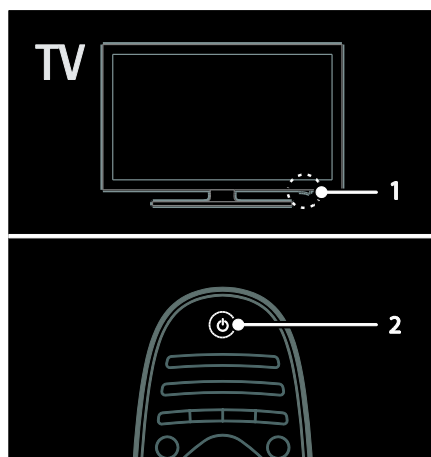

### Switch the TV on


- Press the power switch at the base of the TV to the **ON** position.
- If the TV is in standby, press  on the remote control.

**Note:** There is a short delay before the TV responds.

**Tip:** If you cannot find your remote control and want to switch on the TV from standby, press **CH +/-** on the front of the TV.

Though your TV consumes very little energy in standby, it does use some energy. If you are not going to use the TV for an extended period of time, switch it off to cut off the power.

### Switch TV to standby

Press  on the remote control. The remote control sensor on the TV switches to red.


## Switch off the TV



Press the power switch at the base of the TV to the **OFF** position.

The TV no longer consumes energy.



## Adjust TV volume

### Increase or decrease the TV volume

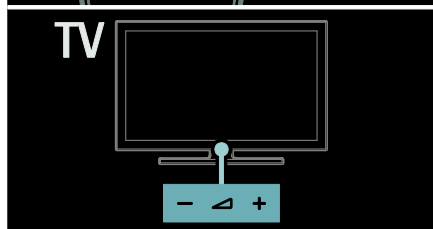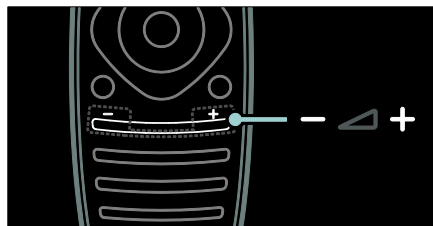
- Press **+/-** on the remote control.
- Press  **+/-** on the front of the TV.




### Mute or unmute the TV volume


 
- Press  to mute the TV, or
- Press  again to restore the volume.

### Adjust headphone volume

1. Press  > **[TV settings]** > **[Sound]**.
2. Select **[Headphones volume]**, then press **OK**.

## Switch TV channels

- Press  on the remote control.
- Press **CH +/-** on the TV.
- Press the **Numeric buttons** to enter a channel number.

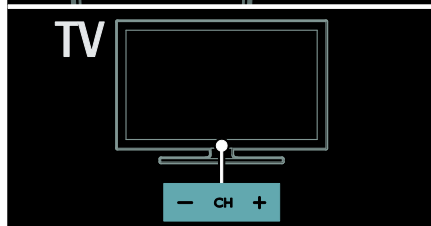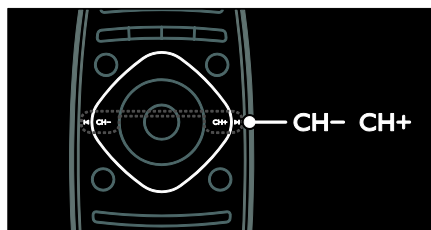



## Manage channel lists

You can view all channels, or only your favourites in the channel list.

Press  **FIND** to access the channel list.

### Create a channel list

You can create a channel list that contains only your favourite channels.


1. Press  **FIND**.
2. Press  **OPTIONS**.
3. Select **[Mark as favourite]** or **[Unmark as favourite]**, then press **OK**.

### Select a channels list

1. In the channel list, press  **OPTIONS**.
2. Select **[Select list]** > **[Favourites]** to display channels in the favourite list; or **[All]** to display all channels.
3. Press **OK** to confirm.

### View only analogue or digital TV channels



You can filter the channel list to access only analogue or digital channels.

1. In the channel list, press  **OPTIONS**.
2. Select **[Select list]** > **[Analogue]** or **[Digital]**, then press **OK**.

Depending on your selection, only analogue or digital channels are available.

## Listen to digital radio

If digital radio channels are available, they are installed automatically when you install the TV channels.

1. While you watch TV, press  **FIND**.
2. Select **[Channel list:]**, then press **OK**.
3. In the channel list, press  **OPTIONS**.
4. Select **[Select list]** > **[Radio]**, then press **OK**.
5. Select a radio channel, then press **OK**.

## View programme guide


The programme guide displays information about digital TV channels, for example:

- Channel schedules
- Synopsis of programmes


**Note:** TV programme guides are available in certain countries only.

## Set programme guide

Before you use the programme guide, check the following settings:

1. Press .
2. Select **[Setup]** > **[TV settings]** > **[Preferences]**.
3. Select **[Programme guide]** > **[From the broadcaster]**, then press **OK**.

## Access the TV programme guide


1. Press .
2. Select **[Programme guide]**, then press **OK**.

**Note:** If you are viewing the programme guide for the first time, select **[Update Programme guide]** to update all available programmes.

## Use TV programme guide options

You can customise the displayed information to:

- Remind you when programmes start
- Display only preferred channels


1. In the programme guide, press  **OPTIONS**.
2. Select one of these settings, then press **OK**:

- **[Set reminder]**: Set programme reminders.
- **[Clear reminder]**: Clear programme reminders.

- **[Change day]**: Select the day to display.
- **[More info]**: Display programme information.
- **[Search by genre]**: Search TV programmes by genre.
- **[Scheduled reminders]**: List programme reminders.
- **[Update Programme guide]**: Update the latest programme information.


## Use smart picture settings

Select your preferred picture setting.

1. While you watch TV, press  **OPTIONS**.
2. Select **[Smart picture]**.
3. Select one of the following settings, then press **OK**:
  - **[Personal]**: Apply your customised picture settings.
  - **[Vivid]**: Rich and dynamic settings, ideal for daytime viewing.
  - **[Natural]**: Natural picture settings.
  - **[Cinema]**: Ideal settings for movies.
  - **[Game]**: Ideal settings for games.
  - **[Energy saving]**: Settings that conserve the most energy.
  - **[Standard]**: Default settings that suit most environments and types of video.
  - **[Photo]**: Ideal settings for photos.
  - **[Custom]**: Customise and store your personal picture settings. Select **Personal** to apply these settings.

## Use smart sound settings

Select your preferred sound setting.


1. While you watch TV, press  **OPTIONS**.
2. Select **[Smart sound]**.
3. Select one of the following settings, then press **OK**:
  - **[Personal]**: Apply your preferred setting in the **Sound** menu.
  - **[Standard]**: Settings that suit most environments and types of audio.
  - **[News]**: Ideal settings for spoken audio, such as the news.
  - **[Movie]**: Ideal settings for movies.
  - **[Game]**: Ideal settings for games.
  - **[Drama]**: Ideal settings for drama programs.



- **[Sports]:** Ideal settings for sports.

## Change picture format

Change the picture format to suit your preference.

1. Press  **ADJUST**.
2. Select **[Picture format]**, then press **OK**.
3. Select a picture format, then press **OK** to confirm.


The available picture formats depend on the video source:

- **[Auto fill]:** Adjust the picture to fill the screen (subtitles remain visible). Recommended for minimal screen distortion but not for HD or PC.
- **[Auto zoom]:** Enlarge the picture to fill the screen. Recommended for minimal screen distortion but not for HD or PC.
- **[Super zoom]:** Remove the black bars on the sides of 4:3 broadcasts. Not recommended for HD or PC.
- **[Movie expand 16:9]:** Scale 4:3 format to 16:9. Not recommended for HD or PC.
- **[Wide screen]:** Stretch 4:3 format to 16:9.
- **[Unscaled]:** Provide maximum detail for PC. Only available when PC mode is enabled in the picture menu.

## Watch a connected device

### Add new device

#### Notes:

- Before you watch a connected device, you must add its icon to the Home menu. See **Connect your TV > Connect device** (Page 40).
  - If you connect an HDMI-CEC compliant device to the TV through an HDMI connector and switch it on, the device is automatically added to the Home menu.
1. Connect and switch on the device.
  2. Press .
  3. Select **[Add your devices]**, then press **OK**.
  4. Follow the onscreen instructions.


- Select your device.
- Select the connector.

Note: If you are prompted to select the TV connection, select the connector that this device uses.


### Select a source


#### From Home menu

After you have added the new device to the Home menu, select the new device icon to view its content.

1. Press .
2. Select the device icon from the Home menu.
3. Press **OK** to confirm.

#### From Source menu

You can also press  **SOURCE** to display a list of connector names. Select the connector that connects the device to the TV.

1. Press  **SOURCE**.
2. Press the **Navigation buttons** to select a connector in the list.
3. Press **OK** to confirm.


### Play from USB

If you have photos, videos or music files on a USB storage device, you can play the files on TV.

**Caution:** Philips is not responsible if the USB storage device is not supported, nor is it responsible for damage or loss of data in the device.



Do not overload the USB port. If you connect an HDD device that consumes more than 500mA power, make sure that it is connected to its own external power supply.


Access the USB content browser as follows:


- While you watch TV, connect the USB device to the USB connector on the TV.
- Press , select **[Browse USB]**, then press **OK**.

### Watch video

Press the **Navigation buttons** to select a video file, then press **OK**.

- Press  or  to search forward or backward within a video.




- Press and hold  to exit the content browser.

While you play video, press  **OPTIONS** to access the following video options:

- **[Stop]**: Stop playback.
- **[Repeat]**: Repeat a video.
- **[Shuffle on]** / **[Shuffle off]**: Enable or disable random play of videos.

### View picture

Press the **Navigation buttons** to select a picture, then press **OK**.




- To pause or stop play, press **OK**.
- To skip to the previous or next file, press  or .
- Press and hold  to exit content browser.

Press  **OPTIONS** to access or exit the following picture options:

- **[Show info]**: Display the file information.
- **[Stop]**: Stop slideshow.
- **[Rotate]**: Rotate the file.
- **[Repeat]**: Repeat the slideshow.
- **[Play once]**: Play the file once.
- **[Shuffle off]** / **[Shuffle on]**: Enable or disable random display of pictures in the slideshow.
- **[Slideshow speed]**: Set the display time for each picture in the slideshow.
- **[Slideshow transition]**: Set the transition from one picture to the next.
- **[Set as Scene]**: Set the selected picture as wallpaper on TV.

### Listen to music

Press the **Navigation buttons** to select a music track, then press **OK**.

- Press  /  to search forward or backward within a track.
- Press and hold  to exit content browser.

Press  **OPTIONS** to access or exit the following music options:

- **[Stop]**: Stop audio play.
- **[Repeat]**: Repeat a track or an album.
- **[Play once]**: Play the track once.
- **[Shuffle on]** / **[Shuffle off]**: Enable or disable random play of tracks.

## Ambilight

### What you can do


(Available on certain models only.)

Ambilight gives a more relaxed viewing experience. It automatically adjusts the colour and brightness of the light to match the TV picture.


Read more in **Use your TV > Ambilight** (Page 18).

### What you need


- For the best Ambilight effect, position the TV 25cm away from the wall.
- Keep the remote control away from the TV, as it can interfere with the infrared signals.
- Dim the light in the room.

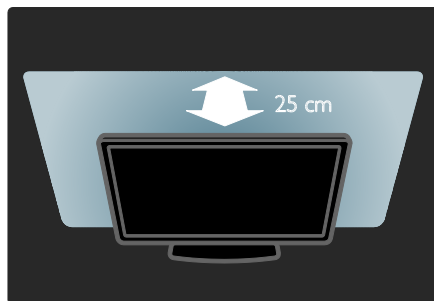

### Switch on

1. Press  **ADJUST**.
2. Select **[Ambilight]**, then press **OK**.
3. To switch Ambilight on or off, select **[On]** or **[Off]**.

You can also press **AMBILIGHT** on the TV to switch Ambilight on or off.

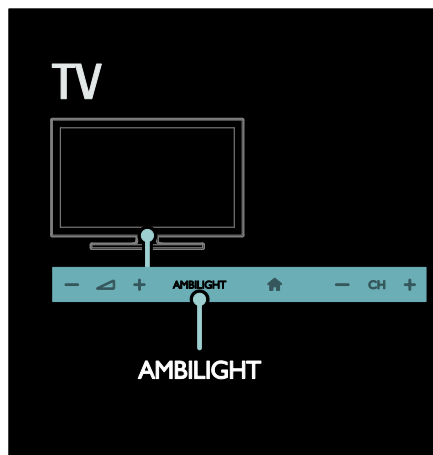

### Change settings

In the Ambilight menu, you can access more Ambilight settings.

1. While you watch TV, press **⏠** > **[Setup]**.
2. Select **[TV settings]** > **[Ambilight]**.
3. Select a setting to adjust:
  - **[Dynamic]**: Adjust Ambilight between relaxed and dynamic levels. Available only if Ambilight **[Colour]** is set to **[Dynamic]**.
  - **[Brightness]**: Adjust the brightness of Ambilight.
  - **[Colour]**: Select a predefined colour.
  - **[Custom colour]**: Set your own Ambilight colour. To access this option, set **[Ambilight]** > **[Colour]** > **[Custom]**.
  - **[Separation]**: Adjust the difference in colour levels on each side of the TV. Turn off this feature for a dynamic and uniform Ambilight colour.
  - **[TV switch off]**: Select how Ambilight switches off when the TV is switched off.
  - **[Lounge light mood]**: Select a lounge light mode. The lounge light comes on when the TV is in standby.
  - **[Scenea lounge light]**: Switch Scenea lounge light on or off when Scenea is enabled.

- **[Wall colour]**: Select the colour of the wall behind the TV. Ambilight corrects its colours to suit the colour of the wall.

### Use lounge light

When the TV is in standby, press **Ambilight** on the front of the TV to create a lounge light effect in your room.

**Note:** It may take more than 5 seconds for the lounge light to switch on.

To select another lounge light colour, see **Use your TV > Ambilight > Setup** (Page 19).

## Browse PC through DLNA

### What you can do

If you have photos, videos or music files stored on a computer connected through a home network, you can play the files on your TV.

### What you need

- A wired or wireless home network, connected with a Universal Plug and Play (uPnP) router.
- A Philips wireless USB adapter or a LAN cable that connects your TV to your home network.
- A media server such as:  
PC running **Windows Media Player 11** or higher; or  
Mac running **Twonky Media Server**.
- Make sure that your computer firewall allows you to run the media server software program.

You will also need to set up the network connection:

- Connect your TV and the computer to the same home network. See **Connect your TV > Computers and the Internet** (Page 47)
- Switch on your computer and the router.

Proceed to set up a media sharing server with Windows Media Player 11 or higher, or Twonky Media Server.

Note: For help to use other media servers, such as TVersity, see the web site of the media server.

### Enable sharing on Window Media Player 11

1. Start **Windows Media Player** on your computer.
2. Select **Library > Media Sharing**.
  - The first time you select **Media Sharing**, a pop-up screen appears. Tick the **Share my media box** and click **OK**.
  - A device marked as **Unknown Device** appears in the **Media Sharing** screen. If the unknown device does not appear after a minute or so, make sure that your PC firewall is not blocking the connection.
3. From the **Media Sharing** screen, select the unknown device and click **Allow**. A green tick appears next to the device.
  - By default, **Windows Media Player** shares files from these folders: **My Music**, **My Pictures**, and **My Videos**.
4. If your files are in other folders, select **Library > Add to Library**, and then follow the onscreen instructions to add the folders.
  - If necessary, select **Advanced options** to display a list of monitored folders.
5. Select **Library > Apply Media Information Changes** to activate the changes.

### Enable sharing on Window Media Player 12

1. Start **Windows Media Player** on your computer.
2. In **Windows Media Player**, select the **Stream** tab, and then select **Turn on media streaming**. The **Media streaming** options screen appears.
3. Click **Turn on media streaming**. You return to Windows Media Player screen.
4. Click the **Stream > More streaming options**.
  - The **Media streaming options** screen appears.

- A media program appears in the local network screen. If the media program does not appear, make sure that your PC firewall is not blocking the connection

### 5. Select the media programme and click **Allowed**.

- A green arrow appears next to the media programme.
- By default, **Windows Media Player** shares files from these folders: **My Music**, **My Pictures**, and **My Videos**.

### 6. If your files are in other folders, select **Organize** tab and select **Manage libraries > Music**.


Follow the onscreen instructions to add the folders that contain your media files.

### Enable sharing on Twonky Media

1. Visit [www.twonkymedia.com](http://www.twonkymedia.com) to purchase the software, or download a free 30-day trial to your Macintosh.
2. Start **Twonky Media** on the Macintosh.
3. In the **Twonky Media Server** screen, select **Basic Setup** and **First steps**. The **First steps** screen appears.
4. Type a name for your media server, and then click **Save changes**.
5. Back in the Twonky Media screen, select **Basic Setup > Sharing**.
6. Browse and select folders to share, and then select **Save Changes**. Your Macintosh rescans the folders automatically so that they are ready to share.

### Play files from computer

**Note:** Before you play multimedia content from the computer, make sure that the TV is connected to the home network, and the media server software is properly set up.

1. Switch on the computer and the router.
2. Switch on your TV.
3. Press  on the remote control.

4. Select **[Browse PC]**, then press **OK**. If the network installation starts, follow the onscreen instructions.

5. If the content browser is displayed, select a file, then press **OK**.

The file starts to play.

6. Press the **Play buttons** on the remote control to control play.

### View pictures

- To play a picture slideshow, select a photo, then press **OK**.
- To pause or stop playback, press **OK** again.
- To play the previous or next file, press **◀** or **▶**.

Press **≡** **OPTIONS** to access one of the following options:

- **[Show info]**: Display the file information.
- **[Stop]**: Stop slideshow.
- **[Rotate]**: Rotate the file.
- **[Repeat]**: Repeat the slideshow.

## Browse Net TV

### What you can do

Enjoy Internet Applications (Apps), specially adapted internet websites for your TV. You can control the Apps with the TV remote control. For example, you can:

- Read newspaper headlines
- Watch videos
- Check weather forecasts

Use the catch-up TV feature to watch TV programmes that you missed. Availability of catch-up TV Apps differ for each country. To find out which TV programmes are available, access the Net TV programme guide.

Find out more on Net TV services at the Net TV forum website, [www.supportforum.philips.com](http://www.supportforum.philips.com).

### Notes:

- Each country has different Net TV services.

- Certain websites may not display completely. Some functions are not available, for example file download, or functions that require plug-ins.
- Net TV services are updated automatically. To view the latest updates, change **All** to **New** in the **App store**.
- Net TV displays one page at a time, in full screen.
- Koninklijke Philips Electronics N.V. bears no responsibility regarding the content and the quality of the content provided by the content service providers.

### What you need

To enjoy Net TV, complete these tasks:

1. On your home network, connect the TV to the Internet
2. On your TV, configure Net TV
3. On your PC, register with Philips to enjoy exclusive benefits and receive updates on product information. You can register now or later.


### Notes:

- You can lock Net TV Applications (Apps) with a 4 digit pin-code. All adult Apps can be locked as one selection.
- When you lock an adult services, the advertisements and Web pages not adapted for Net TV remain accessible.


### Connect the TV to the Internet

On your home network, connect the following:

1. Connect a router with a high-speed connection to the Internet.
2. Switch the router on.
3. Install the network. See (Page 47).

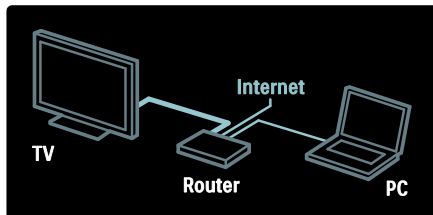

## Configure Net TV

1. Press , select **[Browse Net TV]**, and then press **OK** to confirm.

The terms and conditions of use are displayed.

2. To agree to the terms and conditions, press **OK**.

The registration menu is displayed.

3. To register with Club Philips, select **[Register]**, then press **OK**.

4. Confirm the onscreen message.

A prompt asks if you want to lock adult services.

5. To lock adult services, select **[Lock]**, then press **OK**.

To leave adult services unlocked, select **[Leave unlocked]**, then press **OK**.

6. To lock, enter a 4-digit code, then press **OK**.

7. Re-enter the 4-digit code, then press **OK**.  
The Net TV start page is displayed.

## Access Net TV Applications (Apps)

The first page shown is the Net TV home page. The icons on this page represent the applications (Apps).

- Browse Internet websites with the Internet Apps.  
Press the **Navigation buttons** to select an App, then press **OK** to confirm.
- Read the Net TV quick guide for more information.
- Access the App Gallery to add more Apps to your home screen.
- You can change country settings and select Apps from other countries.

## Access website

1. Select an Internet App, then press **OK**.
2. Use the **Numeric buttons** on the TV remote control to enter a web address.

## Onscreen keyboard

Select the area to enter the web address, then press **OK**.


A keyboard appears onscreen.

Use this to enter the web address.


## Clear Net TV memory

**Warning:** This option resets Net TV completely.

You can clear the Net TV memory completely, including your favourites, the parental control code, passwords, cookies and history.




1. Press .
2. Select **[Setup]** > **[Network settings]**.
3. Select **[Clear Net TV memory]**, then press **OK**.


## Options

Press  **OPTIONS** to select the following:

- Remove App
- Lock App
- Unlock App
- Move App

## Show remote control


Keys such as play , rewind  and fast forward  can be called up with **[Show remote control]**.

Press  **OPTIONS** and select **[Show remote control]**. Use the onscreen keys to operate the connected audio or video player.

Select a key and press **OK** to carry out its function. Press  to hide the onscreen keys.

Select **P+** and **P-** to scroll up and down on a web page.

## Zoom page

To zoom in and out on an Internet page, press  **OPTIONS** and select **[Zoom page]**. Use the slider bar to set the enlargement.

To scroll through an Internet page, use the **Navigation buttons** to jump from highlight to highlight.

## Reload page

If a page does not load correctly, reload it.

Press  **OPTIONS** and select **[Reload page]**.

## Security info

To view security information about a page, press **⏏** **OPTIONS** and select **[Security info]**.

## Rent online video

### What you can do

With this TV, you can rent a video from an online video store.

1. Open a video store. You may need to register or enter your login.
2. Select a video.
3. Make the online payment.
4. Download a video.

### What you need

To rent and download a video, you need a high-speed Internet connection to the TV. Read more about network connections in **Connect your TV > Computers and the Internet** (Page 47).

You also need an SD memory card to insert into the TV SD card slot.

### SD memory size


Use a blank SD memory card with at least 4 GB of storage capacity.

For high-definition video, make sure that you use an SD card with at least 8 GB of storage capacity.

Note: If the write speed is insufficient for video transfer, the TV rejects the SD card.

**Caution:** This TV has a standard SD card slot that can be used only for renting video.

Follow the instructions described here. If you insert the card incorrectly, you might damage the card. All existing content on the SD card is erased before you download rented videos.

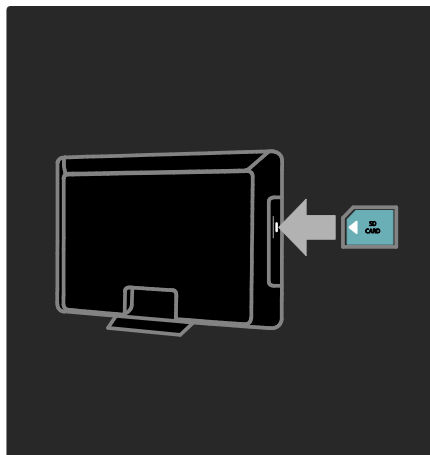

### Format an SD card

1. Switch on the TV.
2. Insert the SD memory card with its front label facing the TV. The TV will automatically start formatting.
3. Leave the SD card permanently in the slot.

### Rent

#### View a video store

1. Press **⏏**.
2. Select **[Browse Net TV] > [Video Stores]** and press **OK**.

The video store page shows the available stores for your country.

3. To view a store, select its icon and press **OK**.

#### Rent a video

To rent a video, select its icon on the video store page and press **OK**. In most cases you can rent a video for one day or for a couple of days or even just 1 hour. The way you select and rent a video varies from store to store.

## Payment

The store prompts you to log in or to open a new account if you do not have one. The login might consist of your email address and a personal PIN code. When you are logged in, you can select the payment method, a credit card, or a value code in most cases.

Consult the video store website for more information on its payment terms.


- To enter a number code (PIN), use the **Numeric buttons** on the remote control.
- To enter an email address, select the text field on the page and press **OK**. Select a character on the keyboard and press **OK** to enter.

## Download the video

When you have paid, you can download the video on to the video memory. During the download, you can continue to watch a TV programme until the TV notifies you that the video is ready to play.

If you cancel a download, you can still download the video until the rental period expires.

## Watch video

1. Press , select **[Browse Net TV]**.
2. Select **[Video Stores]**, then press **OK**.
3. With your log-in, enter the online store where you rented the video.
4. Select the video from the list of downloaded videos, then press **OK** to play.



# 3 Use more of your TV

## View Teletext

### Select a page

1. Select a channel that has teletext feature, then press **TEXT**.
2. Select a page in one of the following ways:
  - Enter the page number with the **Numeric buttons**.
  - Press **▲▼** or **◀▶** to view the next or previous page.
  - Press the **Colour buttons** to select a colour coded item.
3. Press **↵** to exit.

### Teletext options

1. When you view teletext, press **≡** **OPTIONS**.
2. Select one of the following options:
  - **[Freeze page] / [Unfreeze page]:** Freeze or unfreeze the current page.
  - **[Dual screen] / [Full screen]:** Enable or disable dual screen teletext. Dual screen splits the current channel or source to the left of the screen, with teletext on the right.
  - **[T.O.P. overview]:** Table Of Pages (T.O.P.) teletext broadcasts allow you to jump from one subject to another without using page numbers.
  - **[Enlarge] / [Normal view]:** Zoom in on the page. Press the **Navigation buttons** to move around the enlarged view.
  - **[Reveal]:** Hide or reveal hidden information on a page, such as solutions to riddles or puzzles.
  - **[Cycle subpages]:** If subpages are available, each is shown automatically.
  - **[Language]:** Switch to a different language group to display different character sets correctly.
3. Press **≡** **OPTIONS** to exit.

## Teletext language

Some digital TV broadcasters provide several teletext languages. You can set your primary and secondary language.

1. Press **🏠**.
2. Select **[Setup] > [Channel settings]** or **[Satellite settings]**.
3. Select **[Languages] > [Primary Text]** or **[Secondary Text]**.
4. Select your preferred teletext languages, then press **OK**.

## Subpages

A teletext page number can contain several subpages. These subpages are shown on a bar next to the main page number.

If subpages are available on a teletext page, press **◀** or **▶** to select them.

## Search

1. When you view teletext, press **OK** to highlight the first word or number.
2. Press the **Navigation buttons** to skip to the word or number to search.
3. Press **OK** to begin the search.
4. Press **▲** until no word or number is highlighted to exit the search.

## Digital teletext

Some digital TV broadcasters offer dedicated digital text or interactive services on their digital TV channels, for example, BBC1.

When in digital teletext:


- Press the **Navigation buttons** to select or highlight items.
- Press the **Colour buttons** to select an option, then press **OK** to confirm or activate.

**Note:** Digital text services are blocked when subtitles are broadcast and enabled on the TV. Read **Use more of your TV > View subtitles** (Page 27).

## Teletext 2.5

Teletext 2.5 offers more colours and better graphics than normal teletext. If Teletext 2.5 is broadcast by a channel, it is switched on by default.

To switch Teletext 2.5 on or off

1. Press .
2. Select **[Setup]** > **[TV settings]** > **[Preferences]**.
3. Select **[Text 2.5]** > **[On]** or **[Off]**, then press **OK**.


---

## Set locks and timers

### Clock

You can display a clock on the TV screen. The clock displays the time that is broadcast by your TV service operator.

#### Display the TV clock


1. While you watch TV, press .
- OPTIONS.**

2. Select **[Status]**, then press **OK**.

The clock is displayed on the lower right hand corner of the TV screen.

#### Change the clock mode

The clock mode is automatically synchronised to the Coordinated Universal Time (UTC). If your TV cannot receive UTC transmissions, change the clock mode to **[Manual]**.

1. While you watch TV, press .
2. Select **[Setup]** > **[TV settings]** > **[Preferences]**.
3. Select **[Clock]** > **[Auto clock mode]**.
4. Select **[Automatic]**, **[Manual]** or **[Country dependent]**, then press **OK**.

#### Enable or disable daylight saving

If clock mode is set to **[Country dependent]**, you can enable or disable daylight saving for your time zone.

1. In the **[Clock]** menu, select **[Daylight saving]** > **[Daylight saving time]** or **[Standard time]**, then press **OK**. Daylight saving is enabled or disabled.


#### Set the clock manually

If clock mode is set to **[Manual]**, set the date and time manually.

1. In the **[Clock]** menu, select **[Date]** or **[Time]**, then press **OK**.
2. Use the **Navigation buttons** to make your selection.
3. Select **[Done]**, then press **OK**.

### Sleeptimer


Sleeptimer switches the TV to standby after a specified time. You can switch off your TV earlier or reset the sleeptimer during the countdown.

1. Press .
2. Select **[Setup]** > **[TV settings]** > **[Preferences]** > **[Sleeptimer]**.
3. Press the **Navigation buttons** to set the sleeptimer.  
The sleeptimer can be set up to 180 minutes, in steps of five minutes. The sleeptimer is switched off if it is set to zero minutes.
4. Press **OK** to activate the sleep timer. The TV switches to standby after the specified time.

### Child lock

To protect children from unsuitable TV programmes, you can lock the TV or block age rated programmes.

#### Set or change the child lock code

1. Press .
2. Select **[Setup]** > **[Channel settings]** > **[Child lock]**.
3. Select **[Set code]**, or **[Change code]**.
4. Enter the code with the **Numeric buttons**.


**Tip:** If you forget your code, enter '8888' to override any existing codes.

#### Lock or unlock channels

1. In the child lock menu, select **[Channel lock]**.
2. Enter the child lock code with the **Numeric buttons**. The **[Channel lock]** menu appears.
3. Select channels to lock or unlock.

## Parental rating

Some digital broadcasters rate their programmes according to age. You can set your TV to display only programmes with age ratings lower than your child's age.

1. Press .
2. Select **[Setup]** > **[Channel settings]** or **[Satellite settings]**.
3. Select **[Child lock]** > **[Parental rating]**.


A message prompts you to enter the child lock code.

4. Enter the child lock code with the **Numeric buttons**.
5. Select an age rating, then press **OK**.  
All programmes above the selected age rating are blocked.


For information on child lock codes, see **Use more of your TV > Set locks and timers > Child lock** (Page 26).

## View subtitles


### Analogue channels

1. Switch the TV to an analogue TV channel.
2. Press **TEXT**.
3. Enter the three number page number of the subtitles page (usually '888').
4. Press  to exit teletext.  
Subtitles display if available.

### Digital channels


1. Press  **OPTIONS**.
2. Select **[Subtitles]**, then press **OK**.
3. Select **[Subtitles off]**, **[Subtitles on]** or **[On during mute]**, then press **OK**.


#### Note:

- If MHEG application is activated, subtitles are not displayed.
- If you select **[On during mute]**, subtitles are displayed only when you press  to mute the sound.

### Subtitle language

You can change the subtitle language on some digital channels.

1. Press .
2. Select **[Setup]** > **[Channel settings]** or **[Satellite settings]** > **[Subtitle language]**.
3. Select **[Primary subtitles]** or **[Secondary subtitles]** for the preferred language.
4. Press **OK** to confirm.

**Tip:** You can also press  **OPTIONS** > **[Subtitle language]**.

## View Scenea

### What you can do


You can display a default picture as the wallpaper on your TV. You can also load another picture as the wallpaper.

If the sleeptimer is off, the wallpaper is displayed for 240 minutes. Otherwise, it is displayed for the duration of the sleeptimer.

### What you need

To use another picture as the wallpaper, you need a USB storage device that contains a picture that is less than 1 MB in size

### Switch on

1. Press .
2. Select **[Scenea]**, then press **OK**.



The default picture is displayed.

**Note:** The wallpaper is displayed for the duration of the sleeptimer. For more information on sleeptimer, see **Use more of your TV > Set locks and timers > Sleeptimer** (Page 26).

### Set TV wallpaper

You can load another picture as the wallpaper.

**Note:** Loading a new picture overrides the existing picture.

1. Connect the USB storage device to the TV.
2. Press .
3. Select **[Browse USB]**, then press **OK**.
4. Select a picture, then press  **OPTIONS**.
5. Select **[Set as Scenea]**, then press **OK**.
6. Select **[Yes]**, then press **OK**.
7. Press any key to exit Scenea.

## Set Scenea lounge light

When the TV is in standby, you can switch on Ambilight and create a lounge light effect with your wallpaper. Ambilight is available on certain models only.

When the TV is in standby, press **AMBILIGHT** on the front of the TV.

**Note:** It can take more than 5 seconds for the lounge light to switch on.

To select another colour for the lounge light, see **Use your TV > Ambilight > Setup** (Page 19).


---

## Set universal access


### Switch on

Some digital TV broadcasters provide special audio and subtitle features for people who are hearing or visually impaired.



To enable these features, turn on universal access in the preference menu.

1. Press .
2. Select **[Setup] > [TV settings] > [Preferences]**.
3. Select **[Universal access] > [On]**, then press **OK**.


### Hearing impaired

**Tip:** To verify whether a hearing impaired audio language is available, press  **OPTIONS** and select **[Audio language]**. Languages with an ear icon support hearing impaired audio.


#### To switch on hearing impaired audio and subtitles

1. While you watch TV, press  **OPTIONS**.
2. Press one of the following buttons to select an option:
  - **Red:** Switch hearing impaired on or off.
  - **Green:** Switch on hearing impaired audio and subtitles.
3. Press  to exit.

## Visually impaired

**Tip:** To verify whether visually impaired audio is available, press  **OPTIONS** and select **[Audio language]**. Languages with an eye icon support visually impaired audio.


#### To switch on visually impaired audio (if available)

1. While you watch TV, press  **OPTIONS**.
2. Press the green button to select **[Visually impaired]**.
3. Press one of the following buttons to select an option:
  - **Red - [Off]:** Turn off visually impaired audio.
  - **Yellow - [Headphones]:** Hear visually impaired audio from headphones only. (if applicable)
  - **Green - [Speakers]:** Hear visually impaired audio from speakers only.
  - **Blue - [Speakers + headphones]:** Hear visually impaired audio from speakers and headphones only.

4. Press  to exit.


**Note:** If the EasyLink remote control is enabled, you cannot select the green or yellow buttons. To disable, see **Connect the TV > Use Philips EasyLink > EasyLink features**.

#### Adjust volume for the visually impaired

1. In the **[Universal access]** menu, press the yellow button to select **[Mixed volume]**.
2. Press the **Navigation buttons** to move the slider up or down, then press **OK**.
3. Press  to exit.

#### Audio feedback for the visually impaired

This feature enables audio feedback when buttons are pressed on the remote control or TV.

1. In the **[Universal access]** menu, press the blue button to select **[Key beep]**.
2. Press the green button to turn on audio feedback, or press the red button to turn it off.
3. Press  to exit.

# Use EasyLink

## What you can do

Get the most out of your HDMI-CEC compliant devices with Philips EasyLink enhanced control features. If your HDMI-CEC compliant devices are connected through HDMI, you can control them at the same time with your TV remote control.


**Note:** Other brands describe HDMI-CEC functionality differently. Some examples are AnyNet (Samsung), Aquos Link (Sharp) or BRAVIA Sync (Sony). Not all brands are fully compatible with Philips EasyLink.

After you switch on Philips EasyLink, these features are available:

### One-touch play

When you play an HDMI-CEC compliant device, the TV switches on from standby, and switches to the correct source.

### One-touch standby

When you press  on the TV remote control, the TV and all HDMI-CEC compliant devices switch to standby mode.

### System audio control

If you connect an HDMI-CEC compliant device that includes speakers, you can choose to hear the TV from those speakers instead of the TV speakers.

For more information about TV audio output, see **Use more of your TV > Use EasyLink > Select speaker output** (Page 30).

### EasyLink remote control

You can control multiple HDMI-CEC compliant devices with your TV remote control.

To switch on EasyLink Remote Control, see **Use more of your TV > Use EasyLink > Control devices simultaneously** (Page 29).

### Retain picture quality

If your TV picture quality is affected by the picture-processing features of other devices, switch on Pixel Plus Link.

To switch on Pixel Plus Link, see **Use more of your TV > Use EasyLink > Retain picture quality** (Page 31).

## Maximize display for subtitled video

While you view subtitles in a video, you can maximize the video display area. Some subtitles can create a separate subtitle bar under the video, which limits the video display area. After you switch on auto subtitle shift, the subtitles display on top of the video image, which maximizes the video display area.

To switch on auto subtitle shift, see **Use more of your TV > Use EasyLink > Maximize display for video with subtitles** (Page 31).

## Hear another device at standby

You can hear a connected HDMI-CEC compliant device through the TV speakers, even when the TV is in standby.

To switch on, see **Use more of your TV > Use EasyLink > Hear another device at TV standby** (Page 31).

## What you need


To benefit from Philips EasyLink advanced control features, make sure that you do the following:

- Connect at least two HDMI-CEC compliant devices through HDMI
- Configure each HDMI-CEC compliant device properly
- Switch on EasyLink

## Switch on

### To switch on or off EasyLink





**Note:** If you do not intend to use Philips EasyLink, switch it off.

1. Press .
2. Select **[Setup] > [TV settings] > [EasyLink]**.
3. Select **[On]** or **[Off]**, then press **OK**.

## Control devices simultaneously



If you connect multiple HDMI-CEC devices that support this setting, all the devices respond to the TV remote control.

**Caution:** This is an advanced setting. Devices that do not support this setting will not respond to the TV remote control.

1. Press .
  2. Select **[Setup]** > **[TV settings]** > **[EasyLink]**.
  3. Select **[EasyLink Remote Control]** > **[On]** or **[Off]**.
  4. Press **OK** to activate.
- **Notes:**
    - To switch back to TV control, press , then select **[Watch TV]**.
    - To control another device, press , then select the device from the Home menu.
    - To exit, press .



## EasyLink buttons

Control HDMI-CEC compliant devices with the following buttons on the TV remote control.

- **OK:** Start, pause or resume play on the connected device, activate a selection, or access the device menu.
- **◀ (Previous) / ▶ (Next):** Search backwards and forwards on the connected device.
- **Numeric buttons:** Select a title, chapter or track.
- **Play buttons:** Control video or music play.
- **Standby:** Display the menu of the connected device.
- : Display the TV menu.
-  (**Standby**): Switch the TV and the connected device to standby.

Other EasyLink buttons are available through the On-Screen Remote Control (OSRC).


## To access the OSRC

1. While you view content from a connected device, press  **OPTIONS**.
2. Select **[Show device keys]**, then press **OK**.
3. Select an onscreen button, then press **OK**.
4. Press  to exit.

## Select speaker output


If the connected device is HDMI Audio Return Channel (HDMI ARC) compliant, you can output TV audio through an HDMI cable. An additional audio cable is not required. See **Connect your TV > About cables > HDMI** (Page 38)

## Configure TV speakers

1. Press .
2. Select **[Setup]** > **[TV settings]** > **[EasyLink]** > **[TV speakers]**.
3. Select one of the following options, then press **OK**:
  - **[Off]:** Switch off TV speakers.
  - **[On]:** Switch on TV speakers.
  - **[EasyLink]:** Stream TV audio through the connected HDMI-CEC device. Switch the TV audio to the connected HDMI-CEC audio device through the adjust menu.
  - **[EasyLink autostart]:** Turn off TV speakers automatically and streams TV audio to the connected HDMI-CEC audio device.

## Select speaker output with Adjust menu

If **[EasyLink]** or **[EasyLink autostart]** are selected, access the adjust menu to switch the TV audio.


1. While you watch TV, press  **ADJUST**.
2. Select **[Speakers]**, then press **OK**.
3. Select one of the following, then press **OK**:
  - **[TV]:** On by default. Stream TV audio through the TV and the connected HDMI-CEC audio device until the connected device switches to system audio control. TV audio is then streamed through the connected device.

- **[Amplifier]:** Stream audio through the connected HDMI-CEC device. If system audio mode is not enabled on the device, audio continue to stream from the TV speakers. If **[EasyLink autostart]** was enabled, the TV prompts the connected device to switch to system audio mode.

### Retain picture quality

If your TV picture quality is affected by the picture-processing features of other devices, switch on Pixel Plus Link.


#### To switch on Pixel Plus Link

1. Press .
2. Select **[Setup]** > **[TV settings]** > **[EasyLink]**.
3. Select **[Pixel Plus link]** > **[On]**, then press **OK**.

### Maximize video display

Some subtitles can create a separate subtitle bar under the video, which limits the video display area. After you switch on auto subtitle shift, the subtitles display over the video image, which maximizes the video display area.


#### Switch on auto subtitle shift

1. Press .
2. Select **[Setup]** > **[TV settings]** > **[EasyLink]** > **[Auto subtitle shift]**.
3. Select **[On]**, then press **OK** to activate.

Note: Make sure that the picture format of the TV is set to **[Auto format]** or **[Movie expand 16:9]**.

### Hear another device at TV standby

You can hear a connected HDMI-CEC compliant device through the TV speakers, even when the TV is in standby.


1. Press  **ADJUST** to receive audio from the connected Philips EasyLink device. If available, audio only mode is enabled.
2. Accept the prompt on the TV to turn off the TV screen.
3. Control the audio playback with the TV remote control.

# 4 Set up your TV

---

## Settings assistant


Use the settings assistant to guide you through the picture and sound settings.

1. While you watch TV, press .
2. Select **[Setup]** > **[Quick picture and sound settings]**, then press **OK**.
3. Select **[Start]**, then press **OK**.
4. Follow the onscreen instructions to choose your preferred settings.

---


## Picture and sound

### More picture settings

1. Press .
2. Select **[Setup]** > **[TV settings]** > **[Picture]**, then press **OK**.
3. Select a setting to adjust:
  - **[Smart picture]**: Access predefined smart picture settings.
  - **[Reset]**: Reset to default settings.
  - **[Contrast]**: Adjust the intensity of the bright areas, keeping dark areas unchanged.
  - **[Brightness]**: Adjust the intensity and details of the dark areas.
  - **[Colour]**: Adjust colour saturation.
  - **[Hue]**: Compensate colour variations in NTSC encoded transmissions.
  - **[Sharpness]**: Adjust sharpness in the image.
  - **[Noise reduction]**: Filter and reduce noise in the image.
  - **[Tint]**: Adjust the colour balance in the image.
  - **[Custom tint]**: Customise tint setting.
  - **[Pixel Plus HD] / [Pixel Precise HD]**: Access advanced settings, including **[HD Natural Motion]**, **[100 Hz Clear LCD]**, **[Advanced sharpness]**, **[Dynamic contrast]**, **[Dynamic backlight]**, **[MPEG artefact reduction]**, **[Colour enhancement]**, **[Gamma]**.

- **[PC mode]**: Allow picture settings to be changed when a PC is connected to the TV through HDMI. If enabled, you can select **[Picture format]** > **[Unscaled]** which provides maximum detail for display of PC content.
- **[Light sensor]**: Adjust settings dynamically to match lighting conditions.
- **[Picture format]**: Change the picture format.
- **[Screen edges]**: Change the picture size.
- **[Picture shift]**: Adjust the position of the picture. You cannot select this setting if the selected picture format is **Auto zoom** or **Wide screen**.

### More sound settings

1. Press .
2. Select **[Setup]** > **[TV settings]** > **[Sound]**, then press **OK**.
3. Select a setting to adjust:
  - **[Smart sound]**: Access predefined smart sound settings.
  - **[Reset]**: Reset to factory default settings.
  - **[Bass]**: Adjust the bass level.
  - **[Treble]**: Adjust the treble level.
  - **[Surround]**: Enable spatial sound.
  - **[Headphones volume]**: Adjust headphone volume.
  - **[Auto volume leveling]**: Automatically reduce sudden volume changes, for example when switching channels.
  - **[Balance]**: Adjust the balance of the left and right speakers.



## Audio settings



### Select audio language

If the TV channel has multiple or dual sound broadcast, you can select the preferred audio language.

While you watch TV, press  **OPTIONS**.


- **[Audio language]**: Select the audio language for digital channels.
- **[Dual I-II]**: Select the audio language for analogue channels.

Digital TV channels can stream several audio languages. If multiple languages are available, select the preferred language.

1. Press .
2. Select **[Setup]** > **[Channel settings]** or **[Satellite settings]** > **[Language]**.
3. Select one of the following settings, then press **OK**:
  - **[Primary audio]** / **[Secondary audio]**: Select the available audio language. Set a secondary language in the same menu. If the primary language is unavailable, the TV receives this language.
  - **[Preferred audio format]**: Select to receive standard audio format (MPEG) or advanced audio formats (AAC, EAC-3 or AC-3 if available).
  - **[Mono/Stereo]**: Select mono or stereo audio if stereo broadcasting is available.
4. Press  to exit.

### Reset to factory settings

You can restore default picture and sound settings, while the channel installation settings remain the same.



1. While you watch TV, press .
  2. Select **[Setup]** > **[TV settings]** > **[Factory settings]**, then press **OK**.
- TV settings are reset to default.

## Channels

### Reorder and rename



#### Reorder channels

After the channels are installed, you can reorder the channel list to your preference.


1. While you watch TV, press  **FIND**.
2. Select **[Channel list]**, then press **OK**.
3. Press  **OPTIONS**.
4. Select **[Reorder]**, then press **OK**.
5. Select the channel to reorder.
6. Press the **Navigation buttons** to move the highlighted channel to another location, then press **OK**.
7. Select one of the following options, then press **OK**.
  - **[Insert]**: Insert the channel into the desired location.
  - **[Swap]**: Swap location with another channel.

#### Rename channels

After the channels are installed, you can rename them to your preference.

1. While you watch TV, press  **FIND**.
2. Select **[Channel list]**, then press **OK**.
3. In the channel list, press  **OPTIONS**.
4. Select **[Rename]**, then press **OK**.
5. In the entry screen, press the **Navigation buttons** or **Numeric buttons** to edit the name, then press **OK**.

Tip: You can press **OK** in the entry screen to enable **Onscreen Keyboard**.

6. Once complete, press the **Navigation buttons** to select **[Done]**.
  - To clear the entry, select **[Clear]**.
  - To cancel, select **[Cancel]**.
7. Press **OK** to confirm.
8. Press  to exit.

## Hide or unhide

### Hide channels

To prevent unauthorised access to channels, hide them from the channel list.

1. While you watch TV, press **FIND**.
2. Select **[Channel list]**, then press **OK**.
3. Select the channel to hide, then press **OPTIONS**.
4. Select **[Hide channel]**, then press **OK**.  
The channel is hidden.

### Unhide channels

1. While you watch TV, press **FIND**.
2. Select **[Channel list]**, then press **OK**.
3. Press **OPTIONS**.
4. Select **[Show hidden channels]**, then press **OK**.  
Hidden channels appear in the channel list, but the channel information is not displayed.
5. Select the channel to unhide, then press **OPTIONS**.
6. Select **[Unhide channel]**, then press **OK**.

### Update channel list

When the TV was switched on for the first time, a full installation of channels was performed.

You can automatically add or remove digital channels or manually update channels.

**Note:** If you are prompted to enter a code, enter '8888'.

### Automatic update

To automatically add or remove digital channels, leave the TV in standby mode. The TV updates channels and stores new channels everyday. Empty channels are removed from the channel list.

If a channel update is performed, a message appears at startup.

**If you do not want this message to appear**

1. Press .
2. Select **[Setup] > [Channel settings]** or **[Satellite settings]**.
3. Select **[Channel installation] > [Channel update message]**.
4. Select **[Off]**, then press **OK**.

### To disable automatic updates

In the **[Channel installation]** menu, select **[Automatic channel update] > [Off]**.

### Automatic install

When the TV was switched on for the first time, a full installation of channels was performed. You can run this full installation again to set your language, country and install all available TV channels.

**Note:**

**[Search for satellite]** is only available if the TV supports DVB-S.

1. Press .
2. Select **[Setup] > [Search for channels]** or **[Search for satellite]**, then press **OK**.
3. Follow the onscreen instructions to complete the channel installation.
4. Once complete, select **[Finish]**, then press **OK**.

**Tip:** Press **FIND** to see the channel list.

- **Notes:**
- During installation, leave settings unchanged unless your digital provider gives you the specific values to enter.
- When digital TV channels are found, the list of installed channels may display empty channel numbers. You can rename, reorder or uninstall these channels.


### Access DVB-C or DVB-T channels

If you have installed both DVB-C and DVB-T channels, you have to switch to the respective network to watch channels on that network.

1. While you watch TV, press .
2. Select **[Setup] > [Channel settings]**.
3. Select **[Channel installation] > [Antenna or Cable DVB]**.
4. Select one of the following settings:
  - **[Antenna (DVB-T)]:** Access free-to-air antenna or digital DVB-T channels.
  - **[Cable]:** Access cable or digital DVB-C channels.
5. Press **OK** to confirm.
6. Press to exit.  
The TV switches to the selected channel list.

**Access DVB-S channels** (for certain models only)

If your satellite is connected to the SAT connector, you can receive satellite channels.


Press  > **[Watch satellite]** to watch satellite channels.

### Install analogue channels

You can search and store analogue TV channels manually.

#### Step 1: Select your system

**Note:** Skip this step if your system settings are correct.

1. While you watch TV, press .
2. Select **[Setup]** > **[Channel settings]** > **[Channel installation]**.
3. Select **[Analogue: Manual installation]** > **[System]**, then press **OK**.
4. Select the system for your country or region, then press **OK**.



#### Step 2: Search and store new TV channels

1. In the **[Analogue: Manual installation]** menu, select **[Find channel]**, then press **OK**.
2. Select one of the following options:
  - Press the **Navigation buttons** or **Numeric buttons** to manually enter the channel frequency.
  - Select **[Search]** then press **OK** to search for the next channel automatically.
3. When the correct channel frequency is entered, select **[Done]**, then press **OK**.
4. Select **[Store as new channel]**, then press **OK** to store the new TV channel.

### Install digital and satellite channels

#### Install digital channels

To improve TV reception, reposition the antenna. You need to know the correct frequency to tune. For best results, contact the service provider or get a professional installer.

1. Press .
2. Select **[Setup]** > **[Channel settings]** > **[Channel installation]**.
3. Select **[Digital: Reception test]** > **[Search]**, then press **OK**.
4. Press the **Numeric buttons** to enter the channel frequency.
5. Select **[Search]**, then press **OK**.
6. When the correct channel is located, select **[Store]**, then press **OK**.
7. Press  to exit.


#### Notes

- If the reception is poor, reposition your antenna and repeat the procedure.
- If you receive the channel with DVB-C, select **[Automatic]** in **[Symbol rate mode]** unless your cable provider supplies you with a specific symbol rate value.

#### Install satellite channels




Available on certain models only.

If your satellite is connected to the SAT connector, you can receive satellite channels.

1. While you watch TV, press .
2. Select **[Setup]** > **[Search for satellite]** > **[Reinstall channels]**.
3. Follow the onscreen instructions to complete the installation.
4. Once complete, select **[Finish]**, and then press **OK**.

#### Fine-tune channels


If the reception of an analogue TV channel is poor, fine-tune the TV channel.

1. Press .
2. Select **[Setup]** > **[Channel settings]** > **[Channel installation]**.
3. Select **[Analogue: Manual installation]** > **[Fine tune]**, and then press **OK**.
4. Press  or  to fine-tune the channel.

5. When you have selected the correct channel frequency, select **[Done]**, and then press **OK**.
6. Select one of the following options, then press **OK**.
  - **[Store current channel]**: Store the channel as the current channel number.
  - **[Store as new channel]**: Store the channel as a new channel number.

---

## Menu language

1. While you watch TV, press .
2. Select **[Setup]** > **[TV settings]** > **[Preferences]** > **[Menu language]**.
3. Select a menu language from the list, then press **OK**.



---

## Other settings

### TV demo

Start a demo to find out more about your TV's features.

**Note:** Demos are not supported on MHEG channels.


1. While you watch TV, press .
2. Select **[Setup]** > **[Watch demos]**, then press **OK**.
3. Select a demo, then press **OK**.
4. Press  to exit.

---

## Update software

### TV software

#### Check software version

1. Press .
2. Select **[Setup]** > **[Software settings]** > **[Current software info]**, then press **OK**.  
The version of the current software is displayed.

Update the software through one of these options:

- update from digital broadcast
- update with USB storage device
- update from the Internet
- For more information, see the following pages.

#### Update from digital broadcast

If available, your TV can receive software updates through digital broadcasts.

If an update is available, a message appears prompting you to update the software. We strongly recommend that you update the software when prompted.

#### Update with USB

Before performing this procedure make sure that you:

- Set aside some time to complete the entire update.
- Have available a USB storage device with at least 256MB of storage space.
- Have access to a computer with a USB port and internet access.

1. Press .
2. Select **[Setup]** > **[Update software]**, then press **OK**.


The update assistant starts.

3. Follow the onscreen instructions to complete the update.

**Note:** If you already have the upgrade file on a USB storage device, connect it to the TV. Then, select **[Setup]** > **[Software settings]** > **[Local updates]**.

## Update from the Internet

If the TV is connected to a router that is connected to the Internet, you can update the TV software directly from the Internet. You need a high speed Internet connection.

1. Press  > **[Setup]** > **[Update now]** and press **OK**.
2. Select **[Internet]** and press **OK**.
3. Follow the instructions onscreen.

When the update is done, the TV switches off and back on again automatically. Wait for the TV to switch back on; do not use the power switch on the TV.

If the TV is connected to the Internet, the TV displays the availability of new software at start up.

## Onscreen Help

### What you need

Before you update the onscreen **[Help]**, make sure that you have the following:

- A USB storage device which is FAT or DOS-formatted.
- Do not use a USB hard drive.
- A PC with Internet access.
- An archive utility that supports the ZIP file format (for example, WinZip for Microsoft Windows or Stuffit for Macintosh).


### Download the latest file

1. Insert a USB storage device into the USB connector on your PC.
2. On your PC, create a folder named 'upgrades' in the root directory of the USB storage device.
3. In your web browser, navigate to [www.philips.com/support](http://www.philips.com/support).
4. At the Philips Support site, find your product and locate the **[Help]** file for your TV. The file (a \*.upg file) is compressed into a \*.zip archive.
5. If the **[Help]** file is a later version than the file in your TV, click it.
6. Save it to the USB storage device.
7. Using the archive utility, extract the \*.zip file to the 'upgrades' folder in the USB storage device.

8. The \*.upg **[Help]** file is extracted.
9. Disconnect the USB storage device from the PC.

## Update [Help]


- Do not switch off the TV or remove the USB storage device during the update.
- If a power failure occurs during the update, do not remove the USB storage device from the TV. The TV continues to update as soon as power is restored.
- If an error occurs during the update, retry the procedure. If the error reoccurs, contact Philips Consumer Care.

1. Switch on the TV.
  2. Disconnect all other USB devices from the TV.
  3. Connect the USB storage device containing the \*.upg file to the USB connector on the TV.
  4. Press .
  5. Select **[Setup]** > **[Software settings]** > **[Local updates]**.
- The updates screen appears.
6. Select the '\*.upg' file and press **OK**. A message displays the update status.
  7. Follow the onscreen instructions to complete the update and restart your TV.

---

## Reinstall the TV

Reinstall your TV to reset all picture and sound settings and reinstall all TV channels.

1. Press .
2. Select **[Setup]** > **[TV settings]** > **[Reinstall TV]**, then press **OK**.
3. Follow the onscreen instructions.

# 5 Connect your TV

## About cables

### Cable quality

#### Overview

Before you connect devices to the TV, check the available connectors on the device. Connect the device to the TV with the highest quality connection available. Good quality cables ensure a good transfer of picture and sound.

The connections shown in this user manual are recommendations only. Other solutions are possible.


**Tip:** If your device only has composite or RCA connectors, use a SCART-cinch adapter to connect the device to a SCART connector on the TV.

### HDMI

An HDMI connection has the best picture and sound quality.

- An HDMI cable combines video and audio signals. Use HDMI for high-definition (HD) TV signals, and to enable EasyLink.
- An HDMI Audio Return Channel (ARC) connector allows output of TV audio to an HDMI ARC compliant device.

- Do not use an HDMI cable longer than 5 meters / 16.4 feet.

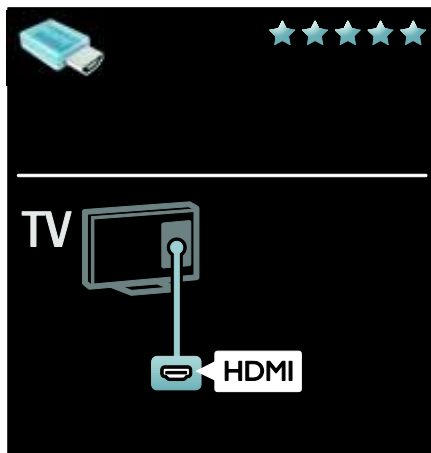


### Y Pb Pr

Use the Component Video (Y Pb Pr) connection together with an Audio Left and Right connection for sound.

Y Pb Pr can handle high-definition (HD) TV signals.

Match the Y Pb Pr connector colours to the cable plugs.

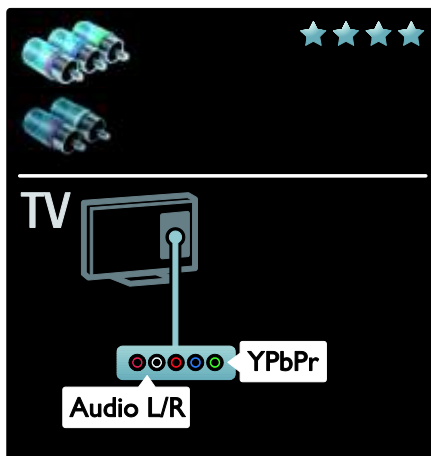

## SCART

A SCART cable combines video and audio signals.

SCART connectors can handle RGB video signals but cannot handle high-definition (HD) TV signals.



## VGA

Use this connection to display PC content on the TV.

For video and sound, use the VGA and AUDIO IN connectors.




## Connect devices

### Overview


You can connect your devices to the TV with any of the following options.


### Blu-ray or DVD disc player

Connect the disc player with an HDMI cable to the TV.

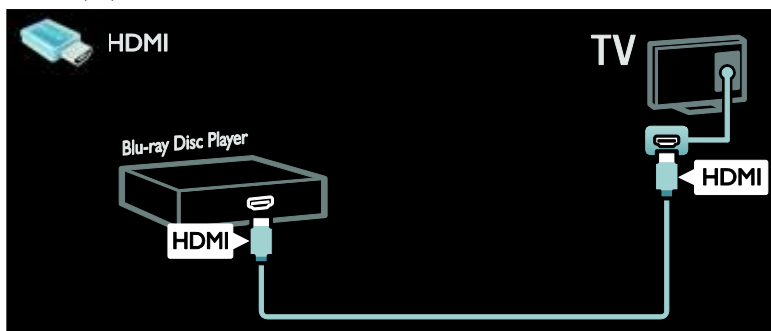

Connect the disc player with a component cable (Y Pb Pr) and an audio L/R cable to the TV.

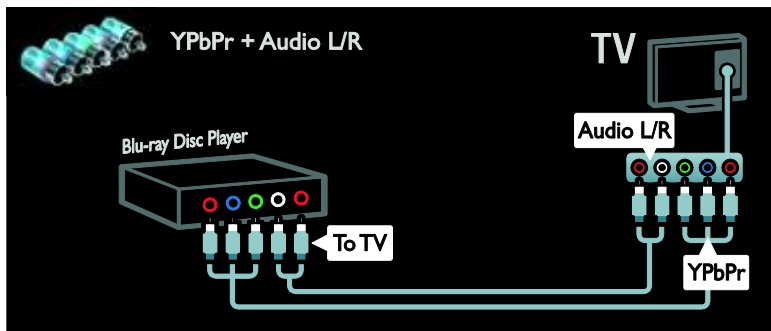


After connection, press  > **[Add your devices]** to add the icon of the connected device to the Home menu. See **Use your TV > Watch a connected device** (Page 17).




TV receiver


Connect the satellite or digital TV receiver with an antenna cable to the TV. (SAT is available on certain models only.)

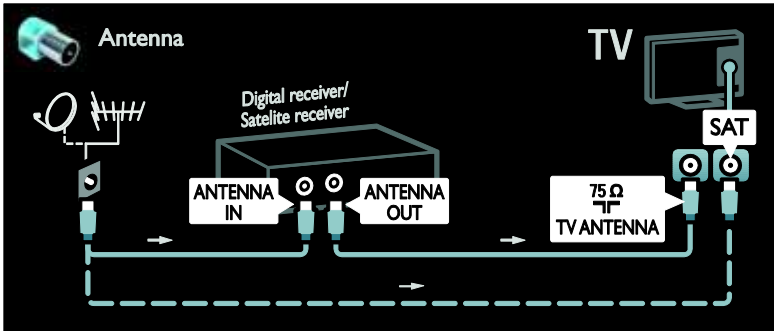


Connect the satellite or digital TV receiver with an HDMI cable to the TV.

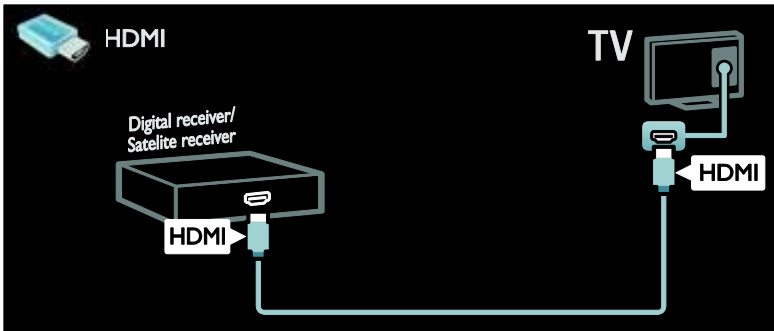

Connect the satellite or digital TV receiver with a SCART cable to the TV.

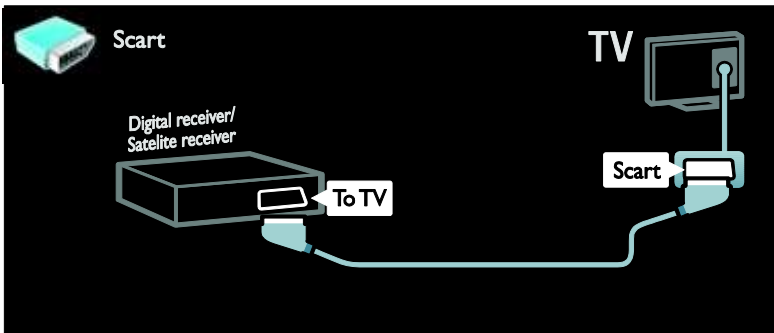


Connect the satellite or digital TV receiver with a component cable (Y Pb Pr) and an audio L/R cable to the TV.

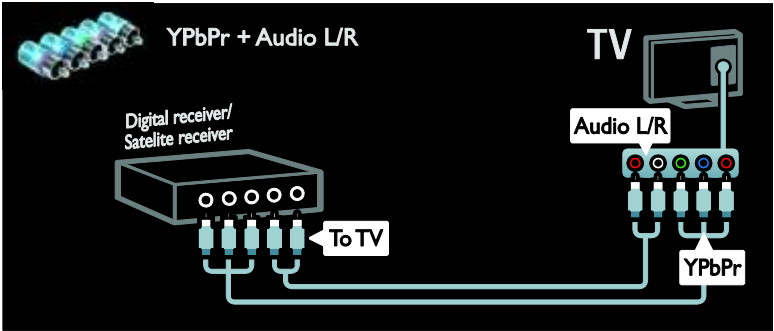


Recorder


Connect the recorder with an antenna cable to the TV. (SAT is available on certain models only.)

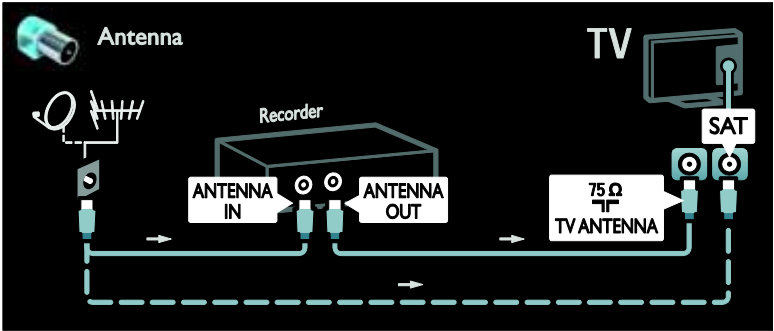

Connect the recorder with a SCART cable to the TV.

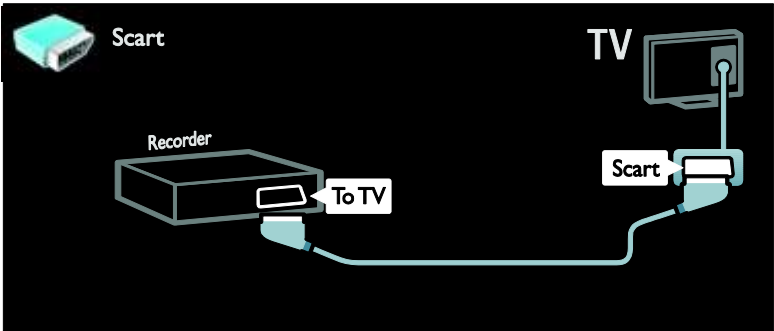

Connect the recorder with a component cable (Y Pb Pr) and an audio L/R cable to the TV.

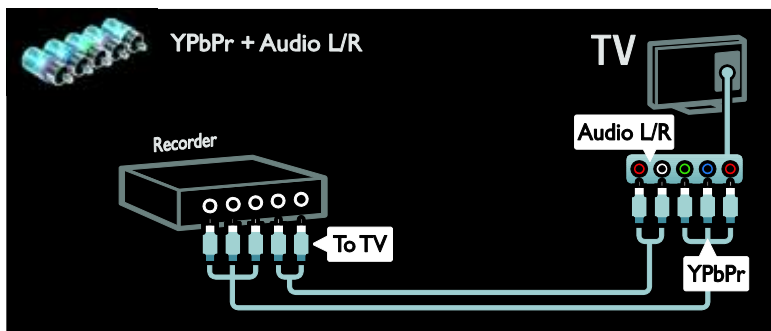


### Game console

The most practical connectors for a game console are on the side of the TV. However, you can also use the connectors at the back of the TV.


For the best gaming experience, set the TV to game mode.

1. Press **ADJUST**.
2. Select **[Smart picture] > [Game]**, then press **OK**.
3. To exit, press **↩**.

Connect the game console with an HDMI cable to the TV.

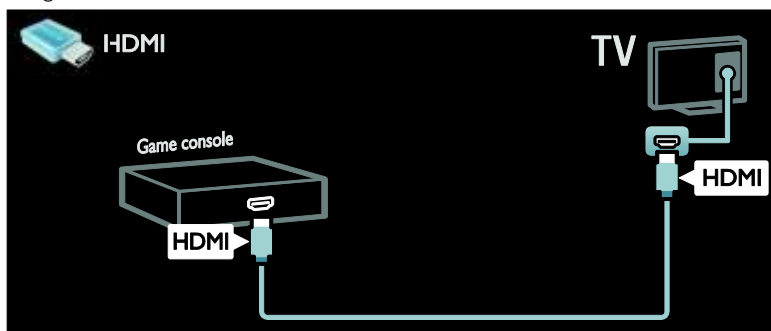


Connect the game console with a component cable (Y Pb Pr) and an audio L/R cable to the TV.

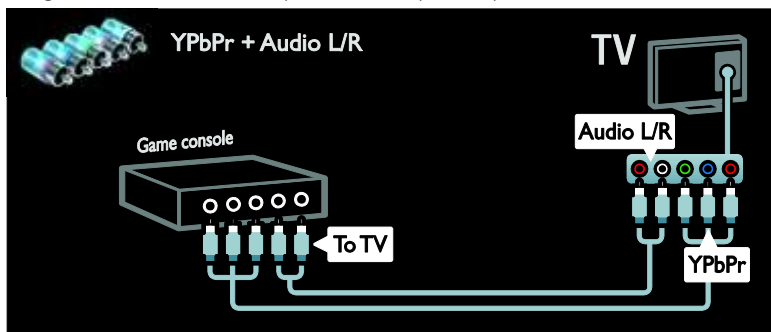


Home theatre system


Connect the home theatre with an HDMI cable and an audio cable to the TV.

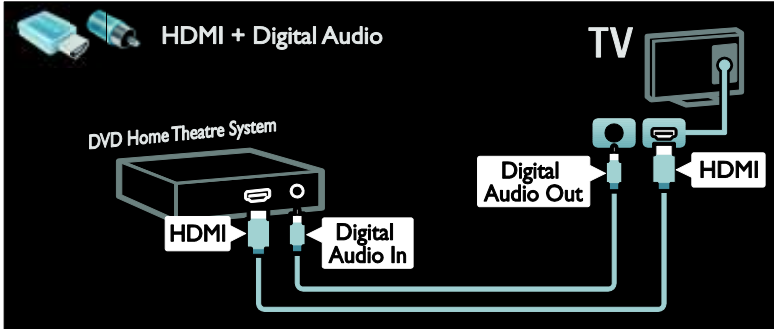

Connect the home theatre with a SCART cable to the TV.

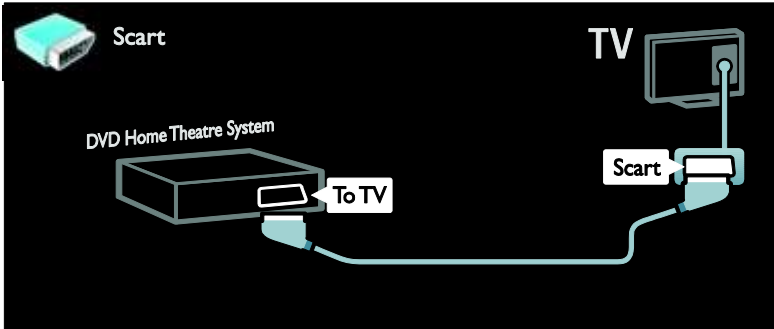


Connect the home theatre with a component cable (Y Pb Pr) and an audio L/R cable to the TV.

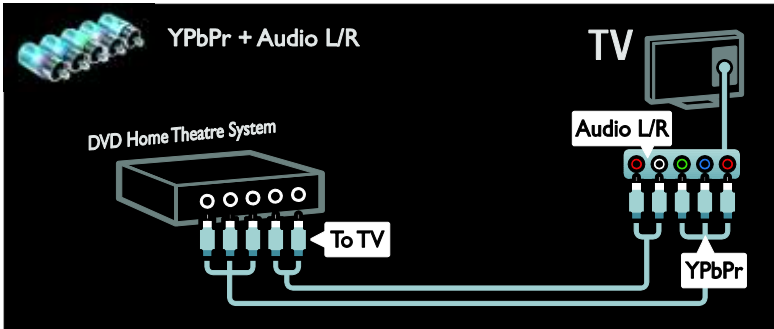

## Digital camera

Connect the digital camera with a USB cable to the TV.

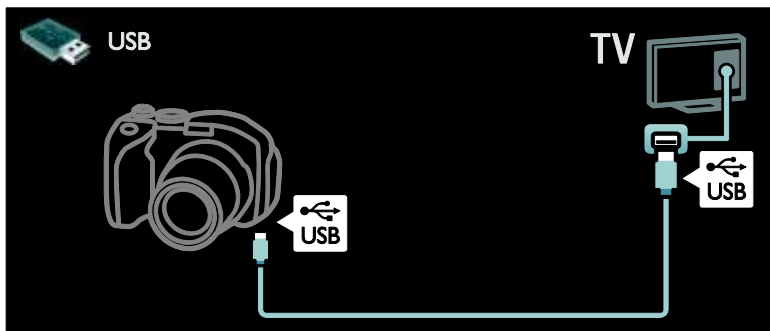


## Digital camcorder

Connect the digital camera with an HDMI cable to the TV.




Connect the digital camcorder with a component cable (Y Pb Pr) and an audio L/R cable to the TV.

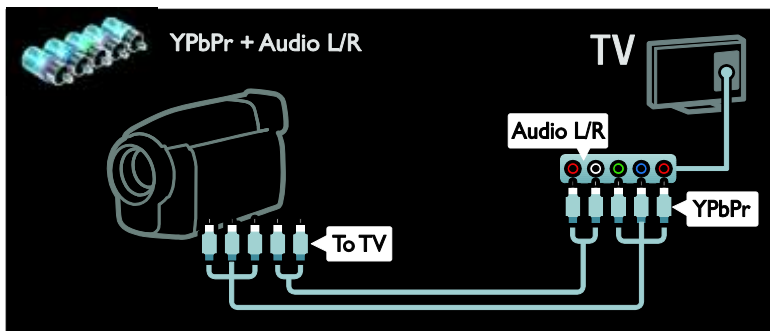

## Connect more devices


### External hard disk

Connect the external hard disk with a USB cable to the TV.

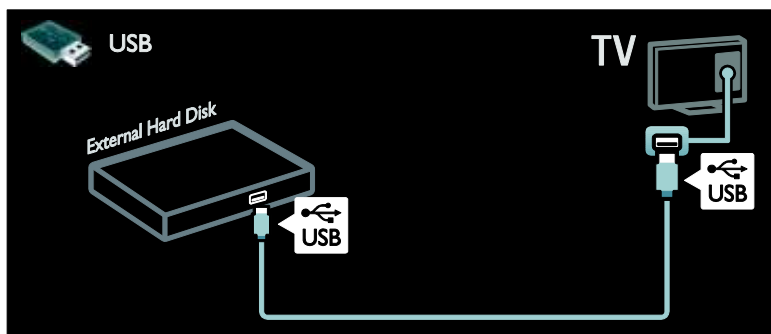


### Computer


Connect the computer with an HDMI cable to the TV.

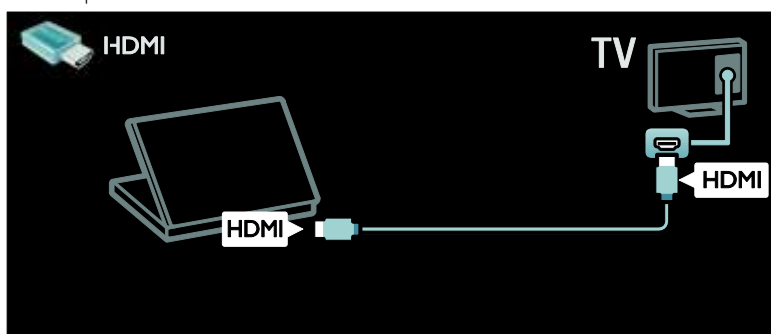

Connect the computer with a DVI-HDMI cable to the TV.

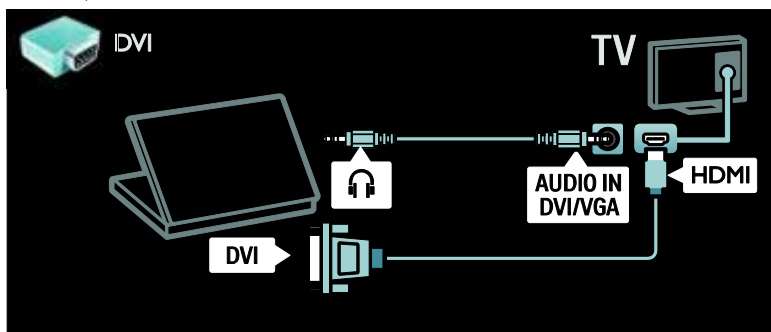

Connect the computer with a VGA cable and an audio cable to the TV.

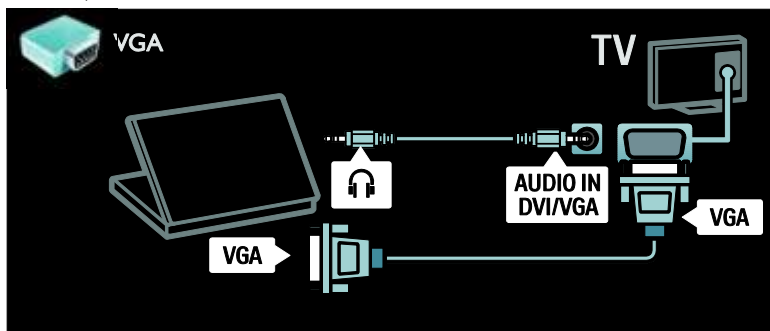

## Computers and the Internet

### What you can do

#### Network benefits

If you connect your TV to a computer network with storage devices such as computers, you can play the photos, music and videos on your devices. See **Use your TV > Browse PC through DLNA** (Page 19).

If you connect your TV to a computer network with Internet access, you can access Net TV content. For more information about Net TV, see **Use your TV > Browse Net TV** (Page 21).

**Note:** If the apparatus does not recover in DLNA mode due to external electrical disturbances (e.g. electrostatic discharge), user intervention is required.

### What you need


**Warning:** This TV complies with the EMC directive only when you use a shielded Cat5 ethernet cable.

To connect your TV to computers, the Internet, or both, you need:

- An ethernet cable that is shorter than 3 metres.
- A computer network that includes:
  - a) A universal plug-and-play (UnPnP) router and
  - b) A computer with one of these operating systems: Microsoft Windows XP, Microsoft Windows Vista, Mac OSX, or Linux.
- To connect your TV to computers, you also need media server software that is set to share files with your TV. See **Use your TV > Browse PC through DLNA** (Page 19).
- To connect your TV to the Internet, you also need a high-speed connection to the Internet.

**Note:** This DLNA1.5 network feature supports these computer operating systems: Microsoft Windows XP or Vista, Intel Mac OSX or Linux

## Connect

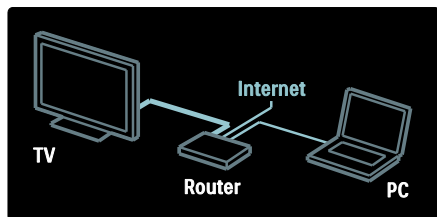

1. Switch on the router and switch on its DHCP setting.
2. With the ethernet cable, connect the router to the TV.

Alternatively, you can also connect the router to the TV wirelessly, through a wireless USB adaptor (not included). See **Connect your TV > Computers and the Internet > Wi-Fi Ready** (Page 48).

3. Press **Home**, select **[Setup] > [Connect to network]**, then press **OK**.
4. Follow the onscreen instructions to install the network.
5. Wait for the TV to find the network connection.
6. If you are prompted, agree to the End User License Agreement.

## Wi-Fi ready

### Project your PC: Introduction

Wi-Fi Ready is available on certain models only.

With the Wireless USB adapter PTA01 accessory (sold separately), you can connect the TV to your network wirelessly. With the free Wi-Fi MediaConnect software, you can project your PC screen on the TV to enjoy video, music, or presentations.

## What you need

To use Wi-Fi MediaConnect, you need the following:

- Connect the TV to your home network
- A wireless router
- A wireless USB adapter

For the availability of the wireless USB adapter, check with your local retailers or buy online at [www.philips.com/tv](http://www.philips.com/tv).

### Project your PC: PC requirements

Minimum specifications

- Windows XP, Vista, Windows 7 (PC only)
- Intel Pentium Core 2 Duo 1.8 GHz
- 512 MB RAM
- 200 MB free hard disk space
- Wi-Fi 802.11g
- Internet connection

### Project your PC: PC requirements

Recommended specifications

- Windows XP, Vista, Windows 7 (PC only)
- Intel Pentium Core 2 Duo 2.1 GHz
- 1 GB RAM
- 200 MB free hard disk space
- Wi-Fi 802.11n
- Internet connection

### Project your PC: Help

To read the Wi-Fi MediaConnect Help, right-click the program icon in the notification tray of the PC and select Help.

### Specifics

You can project high-definition (HD) or standard-definition (SD) video, depending on the processing power of your PC.

- Due to output content protection, certain commercial DVD or Blu-ray discs may not be projected.
- The TV shows PC media files with a small delay.
- Wi-Fi MediaConnect is available for PC only.



## Project your PC: Install Wi-Fi MediaConnect

1. Find the Wi-Fi MediaConnect CD-ROM that comes bundled with the PTA01 adapter.
2. Insert the CD-ROM into your PC.
3. Your PC starts your Internet browser and opens the Wi-Fi MediaConnect download page - [www.wifimediconnect.philips.com](http://www.wifimediconnect.philips.com). PC system requirements are available on the website.
4. Enter the code printed on the CD-ROM envelope.
5. Click the 'Download now' button to download the free Wi-Fi MediaConnect software.
6. Once downloaded, start the file 'Wi-Fi MediaConnect\_setup.exe'.
7. Follow the onscreen instructions.

## Common interface

### What you can do

To watch some digital TV programmes, you need a Conditional Access Module (CAM).


If a CAM is inserted and subscription fees are paid, you can watch the channel. The applications, functions, the content and the onscreen messages vary for each CAM service.

### What you need

**Caution:** To protect the CAM from damage, insert the CAM according to these instructions.

### Notes:

- This TV supports CI as well as CI+. CI+ allows service providers to offer premium HD digital programmes with a high level of copy protection.
- Refer to the documentation from your service operator on how to insert a smart card into the Conditional Access Module.

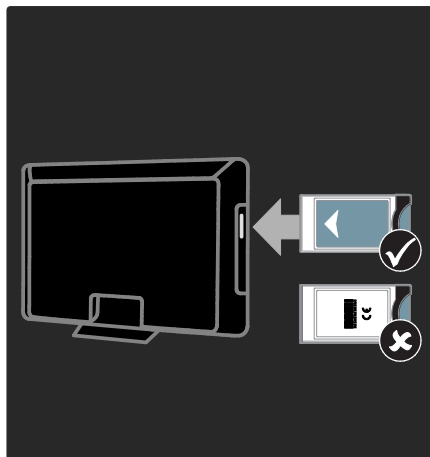

1. Switch off the TV.
2. Follow the directions printed on the CAM and insert the CAM into the Common Interface at the side of the TV.
3. Push the CAM in as far as it will go, then wait for the CAM to be activated. This takes a few minutes.

To prevent digital services from being deactivated, do not remove the CAM from the slot when it is in use.

### Watch CAM services

1. After inserting and activating the CAM, press **≡** **OPTIONS**.
2. Select **[Common interface]**, then press **OK**.
3. Select the CAM provider and press **OK**.

# 6 Troubleshooting

---

## Contact Philips

**Warning:** Do not attempt to repair the TV yourself. This may cause severe injury, irreparable damage to your TV or void your warranty.

If you cannot resolve your problem, refer to the frequently asked questions (FAQs) for this TV at [www.philips.com/support](http://www.philips.com/support).

You can also contact Philips Consumer Care in your country for support. You can find the contact number in the leaflet that accompanies the TV.

Take a note of your TV model and serial number before you contact Philips. These numbers are printed on the back of the TV and on the packaging.

---

## General TV

**The TV does not switch on:**

- Disconnect the power cable from the power outlet. Wait for one minute then reconnect it.
- Make sure that the power cable is securely connected.
- Make sure that the **power switch** at the base or back of the TV is switched on.

**The TV does not respond to remote control or front controls when switched on**

The TV requires some time to start up. During this time, the TV does not respond to the remote control or front controls. This is normal behavior.

**The standby light on the TV blinks red:**

Disconnect the power cable from the power outlet. Wait until the TV cools down before you reconnect the power cable. If the blinking reoccurs, contact Philips Consumer Care.

**You forgot the code to unlock the child lock feature:**

Enter '8888'.

**The TV menu is in the wrong language:**  
Change the TV menu to your preferred language.


For more information, see **Set up your TV > Menu language** (Page 36).

**When you are turning the TV on, off or to standby, you hear a creaking sound from the TV chassis:**

No action is required. The creaking sound is due to the normal expansion and contraction of the TV as it cools and warms up. This does not affect performance.

**When the TV is in standby, a startup splash screen is displayed, then returns to standby mode:**

This is normal behavior. When the TV is disconnected and reconnected to the power supply, the startup screen is displayed at the next startup.

To switch on the TV from standby, press  on the remote control or press any key on the front of the TV.

---

## TV channel

**Previously installed channels do not appear in the channel list:**

Make sure that the correct channel list is selected.

- **No digital channels were found during the installation:**  
Make sure that the TV supports DVB-T, DVB-C or DVB-S in your country.
- Make sure that the antenna is properly connected and the correct network is selected.

## Picture

**The TV is on, but there is no picture or the picture is distorted:**

- Make sure that the antenna is properly connected to the TV.
- Make sure that the correct device is selected as the display source.
- Make sure that the external device or source is properly connected.

**There is sound but no picture:**

Make sure that the picture settings are set correctly.

**There is poor TV reception from an antenna connection:**

- Make sure that the antenna is properly connected to the TV.
- Loud speakers, unearthed audio devices, neon lights, high buildings and other large objects can influence reception quality. If possible, try to improve the reception quality by changing the antenna direction or moving devices away from the TV.
- If reception on only one channel is poor, fine-tune this channel.

**There is poor picture quality from connected devices:**

- Make sure that the devices are connected properly.
- Make sure that the picture settings are set correctly.

**The TV did not save your picture settings:**

Make sure that the TV location is set to **Home**. You can change and save settings in this mode.

**The picture does not fit the screen; it is too big or too small:**

Try a different picture format.

**The picture position is incorrect:**

Picture signals from some devices may not fit the screen correctly. Check the signal output of the device.

**The picture from broadcasts is scrambled:**

You may need a Conditional Access Module to access content. Check with your service operator.

**An "e-sticker" banner displaying information appears on the TV display:**

The TV is in **[Shop]** mode. To remove the e-sticker, set the TV to **[Home]** mode, then restart the TV. **Position the TV > Location** (Page 10).

**The computer display on the TV is not stable:**

- Make sure that your PC uses the supported resolution and refresh rate. See **Product specifications > Display resolutions** (Page 53).
- Set the TV picture format to **[Unscaled]**.

## Sound

**There is a picture but sound quality is poor:**

If no audio signal is detected, the TV automatically switches the audio output off — this does not indicate malfunction.

- Make sure that all cables are properly connected.
- Make sure that the volume is not muted or set to zero.
- Make sure that the TV speakers setting is selected. Press **III ADJUST**, select **[Speakers]**, and then select **TV**.
- Make sure that the TV audio output is connected to the audio input on the HDMI-CEC enabled or EasyLink compliant home theatre device. Sound should be heard from the home theatre speakers.

**There is a picture but the sound quality is poor:**

Make sure that the sound settings are correctly set.

**There is a picture but sound comes from one speaker only:**

Make sure that sound balance is set to the centre.

---

## HDMI

### There are problems with HDMI devices:

- Note that HDCP (High-bandwidth Digital Content Protection) support can delay the time taken for a TV to display content from a HDMI device.
- If the TV does not recognise the HDMI device and no picture is displayed, switch the source from one device to another and back again.
- If there are intermittent sound disruptions, make sure that output settings from the HDMI device are correct.
- If you use an HDMI-to-DVI adapter or HDMI to DVI cable, make sure that an additional audio cable is connected to AUDIO L/R or AUDIO IN (mini-jack only).

### You cannot use EasyLink features:

Make sure that your HDMI devices are HDMI-CEC compatible. EasyLink features only work with devices that are HDMI-CEC compatible.

**If an HDMI-CEC compliant audio device is connected to the TV and the TV does not display any mute or volume icon when the volume is muted, increased or decreased.**

This behaviour is normal when an HDMI-CEC audio device is connected.

---

## USB

### USB device content is not displayed:

- Make sure that the USB storage device is set to **Mass Storage Class** compliant, as described in the storage device's documentation.
- Make sure that the USB storage device is compatible with the TV.
- Make sure that the audio and picture file formats are supported by the TV.

### Audio and picture files do not play or display smoothly:

The transfer performance of the USB storage device may limit the data transfer rate to the TV which causes poor playback.

---

## Network

### Net TV does not work

If the connection to the router is properly set up, check the router connection to the Internet.

### Browse PC or Net TV access is slow.

Refer to your router's user manual for information on transfer rate and other factors of signal quality.

You need a high-speed Internet connection for your router.

### Wireless network is distorted or not found.

- Make sure that the wireless network is not disturbed by microwave ovens, DECT phones or other neighbouring Wi-Fi devices.
- If the wireless network is not working, try a wired network connection.
- For DLNA connection, click on **How does sharing change firewall settings** in the **Media Sharing** window for the Help file.

# 7 Product specifications

## Power and reception

### Power

- Mains power : AC 220-240 V~, 50-60 Hz
- Standby power : <0.15 W
- Ambient temperature: 5 to 40 degrees Celsius
- For power consumption, see the product specifications at [www.philips.com/support](http://www.philips.com/support).

### Reception

- Antenna input: 75 ohm coaxial (IEC75)
- TV system: DVB COFDM 2K/8 K,
- Video playback: NTSC, PAL, SECAM
- Digital TV: MPEG-4, DVB-T (Terrestrial), DVB-C (Cable), \*DVB-S (Satellite).
- Tuner bands: VHF, UHF, S-Channel, Hyperband

Available on certain models only.

## Display and sound

### Picture/Display

- Display type: LCD Full HD W-UXGA
- Diagonal size:
  - 81 cm/32 inch
  - 94 cm/37 inch
  - 102 cm/40 inch
  - 117 cm/46 inch
  - 140 cm / 55 inch
- Aspect ratio: Widescreen 16:9
- Panel resolution: 1920 x 1080 p, 100 Hz
- Pixel Precise HD picture enhancement
- 1080 p 24 / 25 / 30 / 50 / 60 Hz processing
- 100 Hz LCD

### Sound

- Output power (RMS):
  - For PFL6606H model: 20 W
  - For PFL66x6H model: 24 W
- Incredible Surround
- Clear Sound
- Dynamic Bass Enhancement
- Mono / Stereo / NICAM

## Display resolutions

### Computer formats - HDMI (Resolution - refresh rate)

640 x 480 - 60 Hz  
 800 x 600 - 60 Hz  
 1024 x 768 - 60 Hz  
 1280 x 720 - 60 Hz  
 1280 x 1024 - 60 Hz  
 1360 x 768 - 60 Hz  
 1600 x 1200 - 60 Hz  
 1920 x 1080 - 60 Hz

### Computer formats - VGA (Resolution - refresh rate)

640 x 480 - 60 Hz  
 800 x 600 - 60 Hz  
 1024 x 768 - 60 Hz  
 1280 x 1024 - 60 Hz  
 1360 x 768 - 60 Hz  
 1600 x 1200 - 60 Hz  
 1920 x 1080 - 60 Hz

### Video formats

#### (Resolution - refresh rate)

480i - 60 Hz  
 480p - 60 Hz  
 576i - 50 Hz  
 576p - 50 Hz  
 720p - 50Hz, 60 Hz  
 1080i - 50Hz, 60 Hz  
 1080p - 24Hz, 25Hz, 30Hz, 50Hz, 60 Hz

# Multimedia

## Supported multimedia connections

- USB (FAT or DOS-formatted; Mass Storage Class compliant with 500mA only)

- SD card slot
- Ethernet UTP5

## Supported image files

- JPEG (\*.jpg)

## Supported audio/video files

Multimedia file names must not exceed 128 characters.

File Extension	Container	Video Codec	Resolution	Frame Rate (fps)	Bit Rate (Mbps)	Audio Codec	USB	DLNA	Net TV	Open Internet	Video Store
.avi	AVI	MPEG4 SP	640x480p	30	3	AAC	Yes	Yes	No	No	No
		MPEG4 ASP	720x576p	30	8	MP3/MPEG1 L2/AC3	Yes	Yes	No	No	No
.mkv	Matroska	H.264	1920x1080p	24	20	HE-AAC, AC3, MP3, PCM	Yes	Yes	No	No	No
.asf .wmv	ASF	WMV9/VC1 SP	352x288p	15	0.384	WMA	Yes	Yes	Yes	No	Yes
		WMV9/VC1 MP	1920x1080p	25/30	20	WMA	Yes	Yes	Yes	No	Yes
		WMV9/VC1 AP	1920x1080p	24/30/60	20	WMA	Yes	Yes	Yes	No	Yes
.mp4	MP4	H.264 BP	720x576i	15/30	5	AAC/HE-AAC (v1&2)/AC3	Yes	Yes	Yes	No	Yes
		H.264 HP	720x576i	15/30	10	AAC/HE-AAC (v1&2)/AC3	Yes	Yes	Yes	No	Yes
		H.264 HP	1920x1080i	15/30	20	AAC/HE-AAC (v1&2)/AC3	Yes	Yes	Yes	No	Yes
		MPEG4 SP	640x480p	30	3	AAC	Yes	Yes	Yes	No	Yes
		MPEG4 ASP	720x576i	30	8	AAC	Yes	Yes	Yes	No	Yes

## Supported audio/video files

Multimedia file names must not exceed 128 characters.

File Extension	Container	Video Codec	Resolution	Frame Rate (fps)	Bit Rate (Mbps)	Audio Codec	USB	DLNA	Net TV	Open Internet	Video Store
.ts	TS	MPEG2	1920x1080p	30	20	MPEG2 L2/MPEG1	Yes	Yes	No	No	No
.mpeg .mpg .vob	PS	MPEG2	1920x1080p	30	20	MPEG2 L2/ MPEG1 L2/AC3 LPCM	Yes	Yes	No	No	No
		MPEG1	352x288	30	1.5	MPEG1 L2	Yes	Yes	No	No	No
.rmvb .rm	RMVB	RealVideo 8.5.10	848x480	30	2	RealAudio/RAAC	Yes	No	No	No	No

## Supported DLNA-compliant media server software

- Windows Media Player (for Microsoft Windows)
- Twonky Media (for Microsoft Windows and Mac OS X)
- Sony Vaio Media Server (for Microsoft Windows)
- TVersionity (for Microsoft Windows)
- Nero MediaHome

- DiXiM (for Microsoft Windows XP)
- Macrovision Network Media Server (for Microsoft Windows)
- Fuppes (for Linux)
- uShare (for Linux)

## Connectivity

### Rear

- EXT 1: SCART (RGB/CVBS)
- EXT 2: Component (Y Pb Pr), Audio L/R
- SERV.U: Service port
- AUDIO IN: DVI/VGA stereo 3.5-mm mini-jack
- SAT (DVB-S): Available on certain models only.

### Bottom

- Network: Ethernet
- DIGITAL AUDIO OUT: Coaxial
- HDMI 2: HDMI
- HDMI ARC: HDMI Audio Return Channel
- Antenna: 75 ohm coaxial
- VGA: PC input

### Side

- Common Interface: CI
- SD card

- USB
- Headphones: Stereo 3.5-mm mini-jack
- HDMI

## Dimensions

**Note:** Dimensions and weights are approximate values only. Design and specifications are subject to change without notice.

### Legend for TV dimensions

The legends used to indicate the TV dimensions are as follows:

( ) : 81 cm / 32 inch TV

{ } : 94-cm/37-inch TV


[ ] : 102 cm / 40 inch TV

(( )) : 117-cm/46-inch TV

{{ }} : 140 cm / 55 inch TV

Take a note of the legend that corresponds to your TV. Then, go to the next page to view the dimensions.


Use your TV legend to note the weight of the TV without the stand.

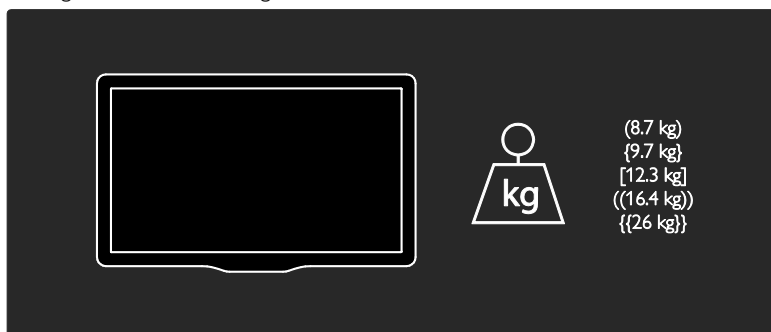


Use your TV legend to note the weight of the TV with stand.



Use your TV legend to note the dimensions of your TV (with and without the stand).

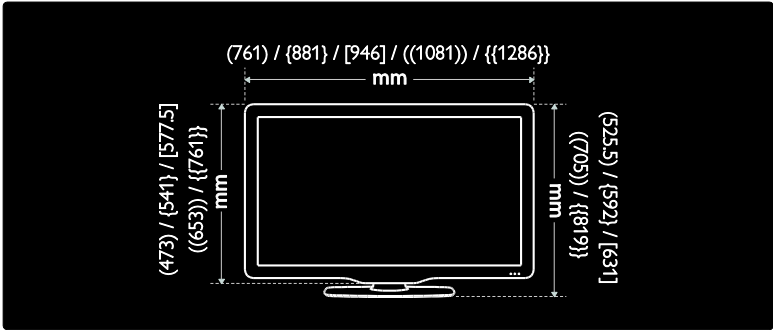

Use your TV legend to note the thickness of your TV (with and without the stand).

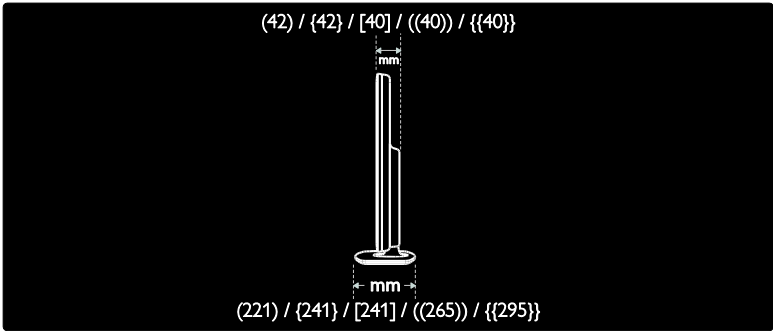

## Help version

UMv 3139 137 04121- 20101124



# 8 Index

---

## A

age rating - 27  
analogue channels, fine-tune - 35  
audio language - 33

---

## C

CAM, enable - 29  
CAM, insert - 49  
CAM, see Conditional Access Module - 49  
care - 8  
channel list - 15  
channels - 33  
channels, favourites - 15  
channels, fine-tune (analogue) - 35  
channels, fine-tune (digital) - 35  
channels, hide or unhide - 34  
channels, install (automatic) - 34  
channels, install (manual) - 35  
channels, rename - 33  
channels, reorder - 33  
channels, switch - 15  
channels, update - 34  
child lock - 26  
clock - 26  
common interface - 49  
computer, play files - 20  
computer, see PC - 47  
Conditional Access Module - 49  
connect - 38, 40  
connect device - 38, 40  
connect, PC - 47  
connect, USB - 17  
connectors - 38  
contact information, on Internet - 11  
contact Philips - 11

controls - 12

---

## D

demo - 36  
devices, add - 17  
devices, watch - 17  
digital channels - 35  
digital channels, fine-tune - 35  
digital channels, subtitles - 27  
digital radio - 15  
dimensions - 55  
display - 53  
display resolution - 53  
DLNA - 19

---

## E

EasyLink - 29  
EasyLink, controls - 30  
EasyLink, enable - 29  
EasyLink, features - 29  
EasyLink, RC key forward - 29  
EasyLink, TV speakers - 30  
Electronic Programme Guide - 16  
end of use - 8  
environment efforts - 8  
environment, recycle - 8  
EPG, menu - 16

---

## F

factory settings - 33  
favourites list, add - 33

---

## H

HDMI - 38  
HDMI ARC - 38  
hearing impaired - 28  
help, onscreen - 11  
high-definition (HD), content - 6

home menu - 4  
home mode - 10

---

## I

install - 34  
install channels - 34  
install channels (automatic) - 34  
install channels (manual) - 35

---

## K

kensington lock - 10

---

## L

language, menu - 36  
location, home or shop - 10

---

## M

multimedia - 54  
multimedia, play files - 17  
mute TV speakers - 30

---

## N

Net TV, browse - 21

---

## O

online video, rent - 23

---

## P

PC, connect - 47  
PC, display resolutions - 53  
picture format - 32  
picture settings - 32  
Pixel Plus link - 29  
placement, stand or wall mount - 9  
position the TV - 9  
power - 53

---

## R

recycle - 8

register product - 11  
reinstall TV - 37  
remote control - 12  
remote control, batteries - 13  
remote control, onscreen - 30  
remote control, overview - 12  
rename channels - 33  
reorder channels - 33

---

## S

safety - 7  
Scenea, enable - 27  
Scenea, see screen saver - 27  
screen saver - 27  
SD card, format - 23  
SD card, memory size - 23  
settings, assistant - 32  
settings, picture - 32  
settings, sound - 32  
shop mode - 10  
sleeptimer - 26  
smart sound - 32  
software - 36  
software, Internet update - 36  
software, version - 36  
sound settings - 32  
specifications - 53  
subtitle, analogue - 27  
subtitle, digital - 27  
subtitle, language - 27  
subtitles - 27

---

## T

teletext - 25  
teletext 2.5 - 25  
teletext, digital text - 25  
teletext, dual screen - 25

teletext, enlarge - 25  
teletext, language - 25  
teletext, search - 25  
teletext, subpages - 25  
troubleshoot - 50

---

## U

universal access - 28

---

## V

visually impaired - 28  
volume - 12

---

## W

wall mount - 10  
wallpaper - 27

